

SEG

SSN Ecosystem GUI

Quick Start Guide

Version 0.3.5

Date: February 2026

1. Introduction	7
2. Purpose of this Document	8
3. Devices & web browsers	8
3.1 Web Browsers	8
3.2 Requirements	8
3.3 IMS Mobile App	8
4. Maritime Application Portal (MAP)	9
4.1 Existing users	10
4.2 New users	10
4.3 Maritime Applications Portal home page	10
5. SEG User Interface	11
5.1 Maritime information	11
5.2 Preferences: Info and Operations	12
5.3 Client Preferences: Map Starting Viewpoint, Map overview and Coordinates grid.	12
5.4 Client Preferences: Units	13
5.5 Client Preferences: Help	13
5.6 Client Preferences: Show	13
5.7 Client Preferences: Pre-Set	14
5.8 Client Preferences: Tooltips	14
5.9 Client Preferences: Labels	15
5.10 Map menu	15
6. Layers management and filtering	18
6.1 Information on layers and symbols	18
6.2 Layer settings	20
6.3 Map Projections and Base Layers	20
7. Vessel information	20
7.1 Tooltips	21
7.2 Select vessels	22
7.3 Command and Info	23
7.4 Voyage information	26
7.5 Get voyages	27
7.6 Get Incidents	27
7.7 PSC Inspections	28
7.8 Get Alerts (24 hrs)	28
7.9 Get Exemptions	28
8. EO Info: images and products	29
8.1 Tooltips	30
8.2 Command and Info	30
8.3 Potential Oil spills	32
8.4 Detected Vessels	34
8.5 SAR Wind and Swell	35
9. Organisations	37
9.1 Organisations Tooltips and Command & Info	37
10. Ports and Offshore installations	38
11. Search	39
11.1 Smart search	39
11.2 Advanced search	40

12. Query	43
12.1 Area Centric Query (ACQ)	43
12.2 Drawing, Importing and Editing an Area	43
12.3 Area Centric Query for Vessels.....	44
12.4 Area Centric Query for EO images and products	45
12.5 Get Track of a vessel	45
12.6 Advanced Replay Function	47
12.7 Get profile of a vessel.....	48
12.8 LRIT.....	49
12.9 SAR SURPIC	49
13. Favourites	49
14. TTT panel (Tables, Timeline and Thumbnails)	51
14.1 Tables.....	51
14.2 Timeline.....	51
14.3 Thumbnails.....	52

List of Tables

Table 1	Map menu items	15
Table 2	Vessels Command and Info Window Functions	24
Table 3	Incident type	28
Table 4	Exemption type	28
Table 5	EO Command and Info	31

List of Figures

Figure 1	The SEG GUI serves multiple maritime user domains.....	7
Figure 2	The SEG GUI provides access to multiple functions and data sets.....	8
Figure 3	Fixed and Mobile Devices for SEG and IMS App visible in one of the stores.....	9
Figure 4	Maritime Applications Portal	9
Figure 5	MAP page and SEG tile	10
Figure 6	SEG User Interface	11
Figure 7	Client Preferences /Info/Current Operation	12
Figure 8	Client Preferences/Map/Starting Viewpoint.....	12
Figure 9	Client Preferences/Units.....	13
Figure 10	Client Preferences/Help.....	13

Figure 11 Client Preferences/Show	13
Figure 12 Client Preferences/Pre-Set.....	14
Figure 13 Client Preferences/Tooltips	14
Figure 14 Client Preferences/Labels	15
Figure 15 Layers and filtering window	18
Figure 16 Information on the layers and symbols for vessel	19
Figure 17 Information on the layers for EO Info and alerts	19
Figure 18 Vessels Layer	20
Figure 19 Vessel - Voyage information (SSN enrichment).....	21
Figure 20 Vessel Tooltip	21
Figure 21 Selected vessels indicated by blue circle	22
Figure 22 Select vessels in an area of interest.....	22
Figure 23 Command and Info window with vessel and voyage information	23
Figure 24 Voyage detailed information from SafeSeaNet	26
Figure 25 Get Incident of a vessel	27
Figure 26 EO images (planned frames and delivered images displayed on map) and Symbology	29
Figure 27 Tooltip EO Scene	30
Figure 28 EO Scene Command and Info Window.....	31
Figure 29 Potential oil spill shown as droplets on map and TTT panel.	33
Figure 30 Potential oil spill shown as a polygon on the map.....	33
Figure 31 Detected vessels – correlated and non-correlated.....	34
Figure 32 VDS Object C&I window	34
Figure 33 SAR wind	35
Figure 34 SAR swell	36
Figure 35 Organizations Layer and filtering window.....	37
Figure 36 Organization Tooltip and Command & Info window	38
Figure 37 Ports and Offshore installations window and TTT table with list of Port facilities	38
Figure 38 Smart Search.....	39

Figure 39 No results found.	40
Figure 40 Advanced Search	40
Figure 41 Advanced Search Attributes Tooltip	41
Figure 42 Advanced Search identified vessel	42
Figure 43 Query options	43
Figure 44 AOI Editor	44
Figure 45 Area centric query for vessels	45
Figure 46 Advanced Get track	46
Figure 47 Timeline	46
Figure 48 Speed Profile	47
Figure 49 Get Profile.....	49
Figure 50 Add vessels to Favourite	50
Figure 51 Add vessels in a group	50
Figure 52 Show saved groups	51
Figure 53 Thumbnails	52

List of Abbreviations

AIS	Automatic Identification System
ABM	Automated Behaviour Monitoring
AOI	Area of Interest
ATA	Actual Time of Arrival
ATD	Actual Time of Departure
CSN	CleanSeaNet
C&I	Command and Info card
CMS	Copernicus Maritime Surveillance Service (CMS)
EO	Earth Observation
ETA	Expected Time of Arrival
ETD	Expected Time of Departure
GUI	Graphical User Interface
IMDATE	Integrated Maritime Data Environment

IMS	Integrated Maritime Services
IVTMIS	Integrated Vessel Traffic Monitoring and Information System
LRIT CDC	Long Range Identification and Tracking Cooperative Data Centre
MMSI	Maritime Mobile Service Identity
MRS	Mandatory Reporting System
NCA	National Competent Authority
PoC	Point of Contact
PoI	Place of Interest
PSC	Port State Control
SAR	Synthetic Aperture Radar
SAR SURPIC	Search and Rescue Surface Picture
SEG	SafeSeaNet Ecosystem Graphical User Interface
SSN	SafeSeaNet
ToI	Target of Interest
TTT	Tables, Thumbnails and Timeline
VDS	Vessel Detection Service
VMS	Vessel Monitoring System
VoI	Vessel of Interest


1. Introduction

The SafeSeaNet Ecosystem GUI¹ (SEG) is a common Graphical User Interface providing access to EMSA's applications/services and their data sets:

- SafeSeaNet (SSN)
- Long Range Identification and Tracking (LRIT)
- CleanSeaNet (CSN) / Earth Observation Data Centre (EODC)/Copernicus Maritime Surveillance Service (CMS)
- Integrated Maritime Services (IMS) for Member States as well as other EU institutional users

The SafeSeaNet Ecosystem GUI replaces the SSN Graphical Interface (GI), the IMS-IMDatE Web User Portal (WUP), the CSN GIS Viewer and (partly) the LRIT User Web Interface (UWI). The SSN Textual Interface (TI) will remain available. The LRIT UWI will remain for administrative functions only. This common GUI may be configured to serve multiple maritime user domains.

Figure 1 The SEG GUI serves multiple maritime user domains.

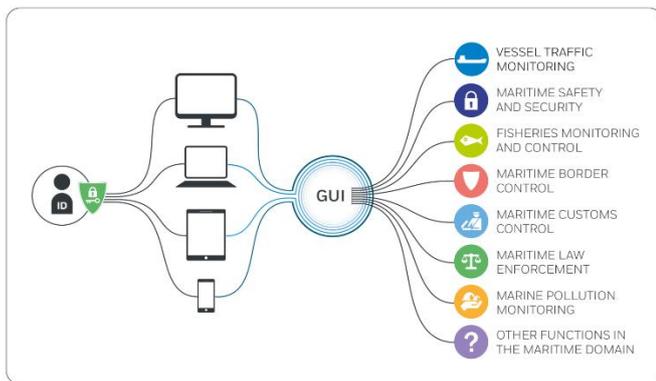


¹ SafeSeaNet Ecosystem GUI is the new interface for the Union Maritime Information and Exchange System, which may be defined as the technical framework encompassing the following maritime applications: SafeSeaNet, Integrated Maritime Data Environment (IMDatE), Earth Observation Data Centre (EODC) and LRIT Cooperative Data Centre (LRIT CDC). To improve situational awareness in the maritime domain and to provide tailor made solutions to authorities, the VTMIS Directive (2002/59/EC) was amended by Commission Directive 2014/100/EU. This allows information gathered and exchanged through SSN to be integrated with data from the EU's other monitoring and tracking systems, such as CleanSeaNet, EU LRIT CDC, THETIS, and from external systems such as satellite AIS.

2. Purpose of this Document

The purpose of this Quick Start Guide is to help users to get up-and-running on the SEG. This guide introduces the interface, an overview of the main menu items and associated features, and how to use them.

Figure 2 The SEG GUI provides access to multiple functions and data sets.

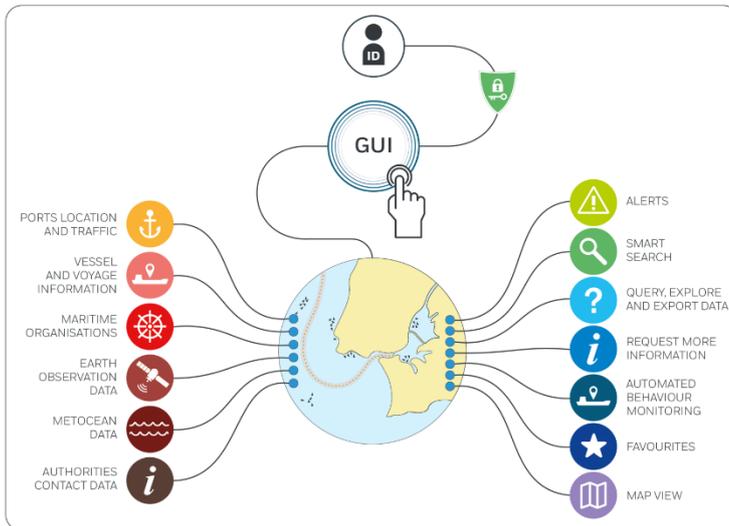

3. Devices & web browsers

The SEG is designed to work on fixed and mobile devices including those enabled for touchscreen.

- Desktops
- Laptops
- Tablets (via HTML browsers)

3.1 Web Browsers

Supported web browsers are the most recent versions of Edge, Chrome, Mozilla Firefox and Safari. When opening the application, the browser will request permission to track your physical location. Accepting this request will enable the SEG to locate and identify the user's physical position based on the local IP address. The map will be centred on the user's physical position. Alternatively, the user may specify the starting viewpoint under Client Preferences/Map/Starting viewpoint as 'User specified' or Current geographical position'.


3.2 Requirements

- Computer screens should have a minimum resolution of 1280 x 1024.
- Recommended web browsers are the most recent version of Chrome (preferred) or Mozilla Firefox. The SEG is also compatible with Safari.
- Cable or fast internet connection is preferred. The LAN bandwidth should be 100 Mbps (Megabit per second), with minimum 6 Mbps Internet connection as download speed. It is possible to check using a site such as <http://www.speedtest.net/>

3.3 IMS Mobile App

The IMS Mobile App is adapted for mobile devices running Android or iOS operating systems. The App is available from Google Play and the App Store. The SEG and the IMS Mobile App have a similar look and feel in terms of map layout, features and layers management.


Figure 3 Fixed and Mobile Devices for SEG and IMS App visible in one of the stores

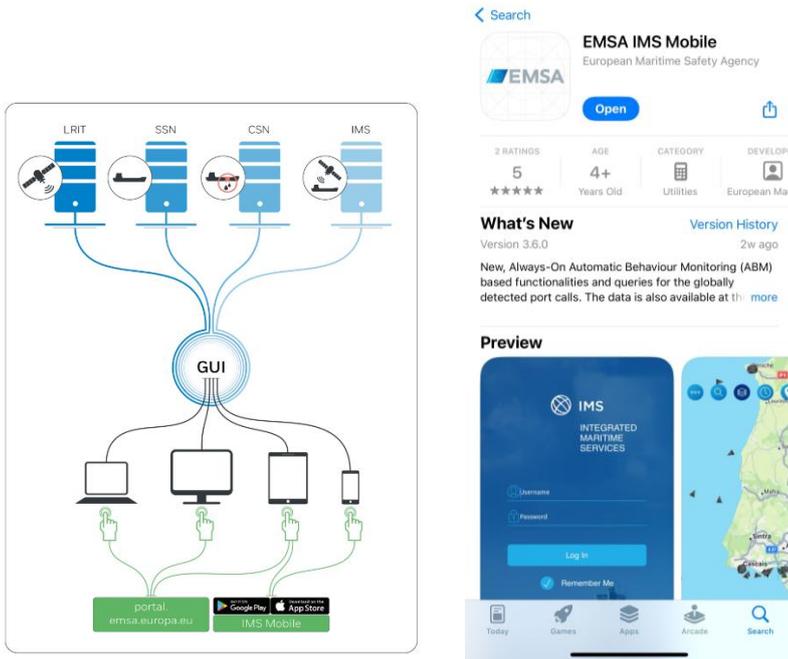

4. Maritime Application Portal (MAP)

To access the SEG from your desktop, laptop or tablet, open the web browser and enter the EMSA Maritime Application Portal URL in the address field. <https://portal.emsa.europa.eu>.

Figure 4 Maritime Applications Portal

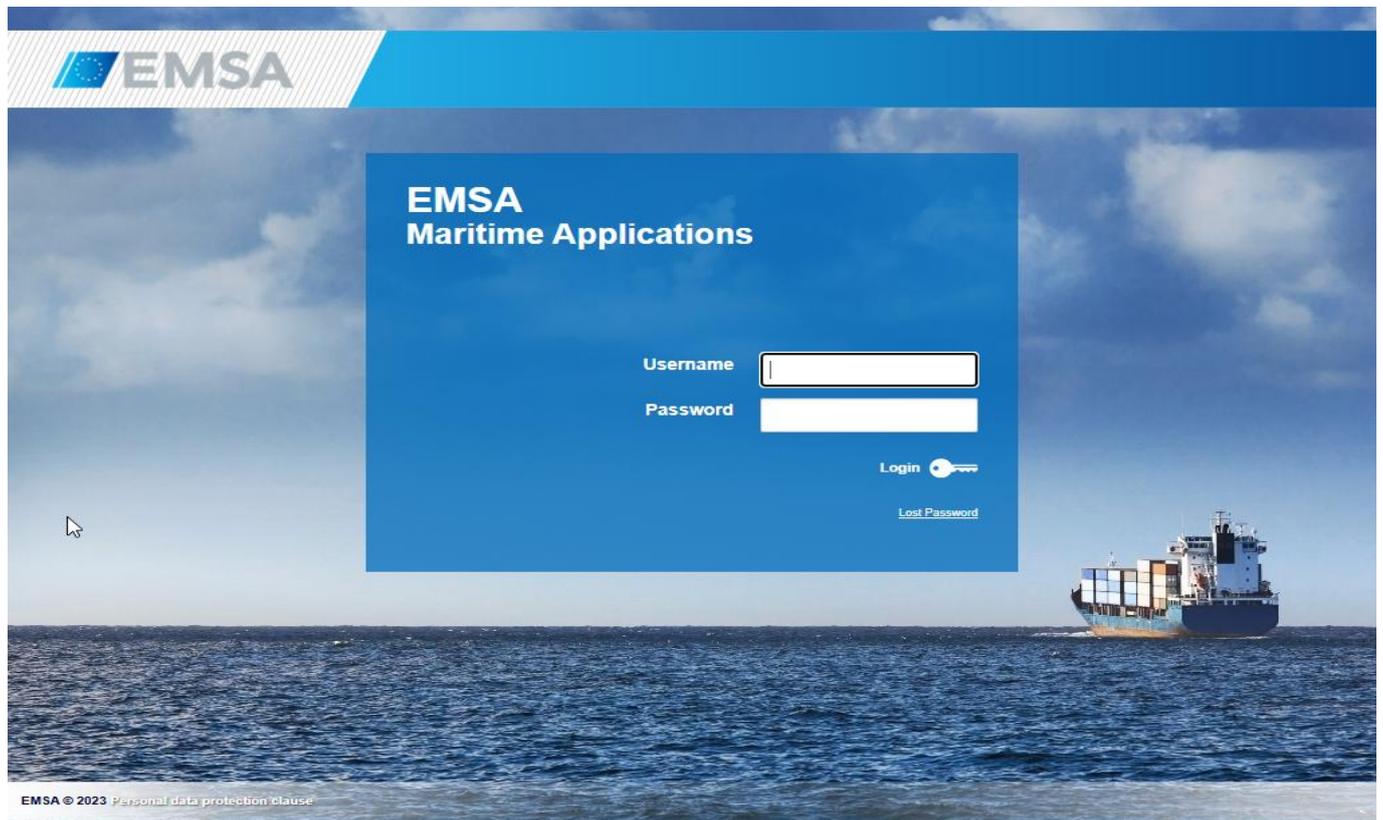

4.1 Existing users

The SEG is a web application that is accessed by entering a valid login and password provided by EMSA. If you have an existing username and password for one of the following maritime applications (SSN, LRIT, IMS or CSN), the same username and password may be used to log onto the SEG.

4.2 New users

To add new users, the National Competent Authority (NCA), the official Point of Contact (PoC) for each application (SSN, LRIT services, IMS or CSN) or EU Bodies service manager may create new accounts by applying existing identity management or SLA procedures.


Alternatively, it is possible to contact the MSS by email (MaritimeSupportServices@emsa.europa.eu). The MSS will validate and set-up the accounts as appropriate.

4.3 Maritime Applications Portal home page

Once logged in to the Maritime Applications Portal, the home page will display tiles for various maritime applications and services, according to permission settings and data access rights associated with the logged user. The home page header displays information regarding the user currently logged in.

Start the SEG by selecting the SEG Home Page tile, or by selecting Portals/SEG.

Figure 5 MAP page and SEG tile

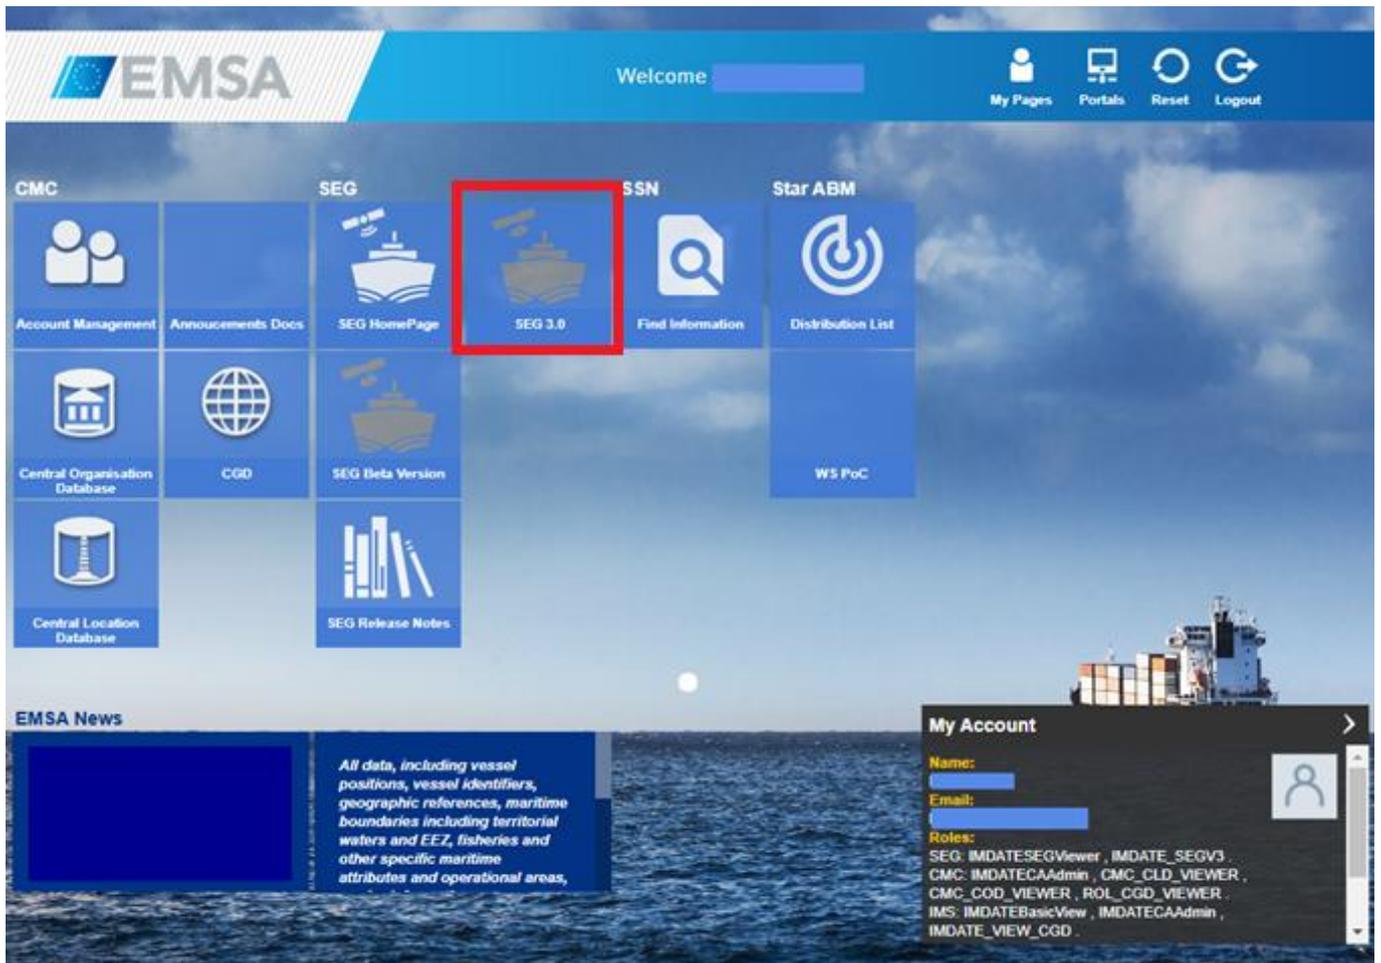

5. SEG User Interface

5.1 Maritime information


Maritime information is available in accordance with the individual users' data access rights and permission settings. The default vessel information displayed is the most recent vessel position (from an available tracking source within the last 24 hours) regardless of the tracking source LRIT, SAT-AIS, T-AIS, MRS, VMS, VDS.

The Earth Observation imagery shown on the map are the images that have been acquired within the last 72 hours and those images that are planned for the next 72 hours.

Pointing (hovering) on a vessel, or other feature on the map, will display a label with information on the feature's attributes. Clicking (selecting) a vessel, or other feature on the map, will reveal more information on the feature in the Command and Info window. Additional information on the feature can be requested and viewed through the Command and Info menu options.

The GUI is map centric. Menus and Tabs are managed in the corners of the screen and may be expanded and collapsed to maximise map coverage.


Figure 6 SEG User Interface

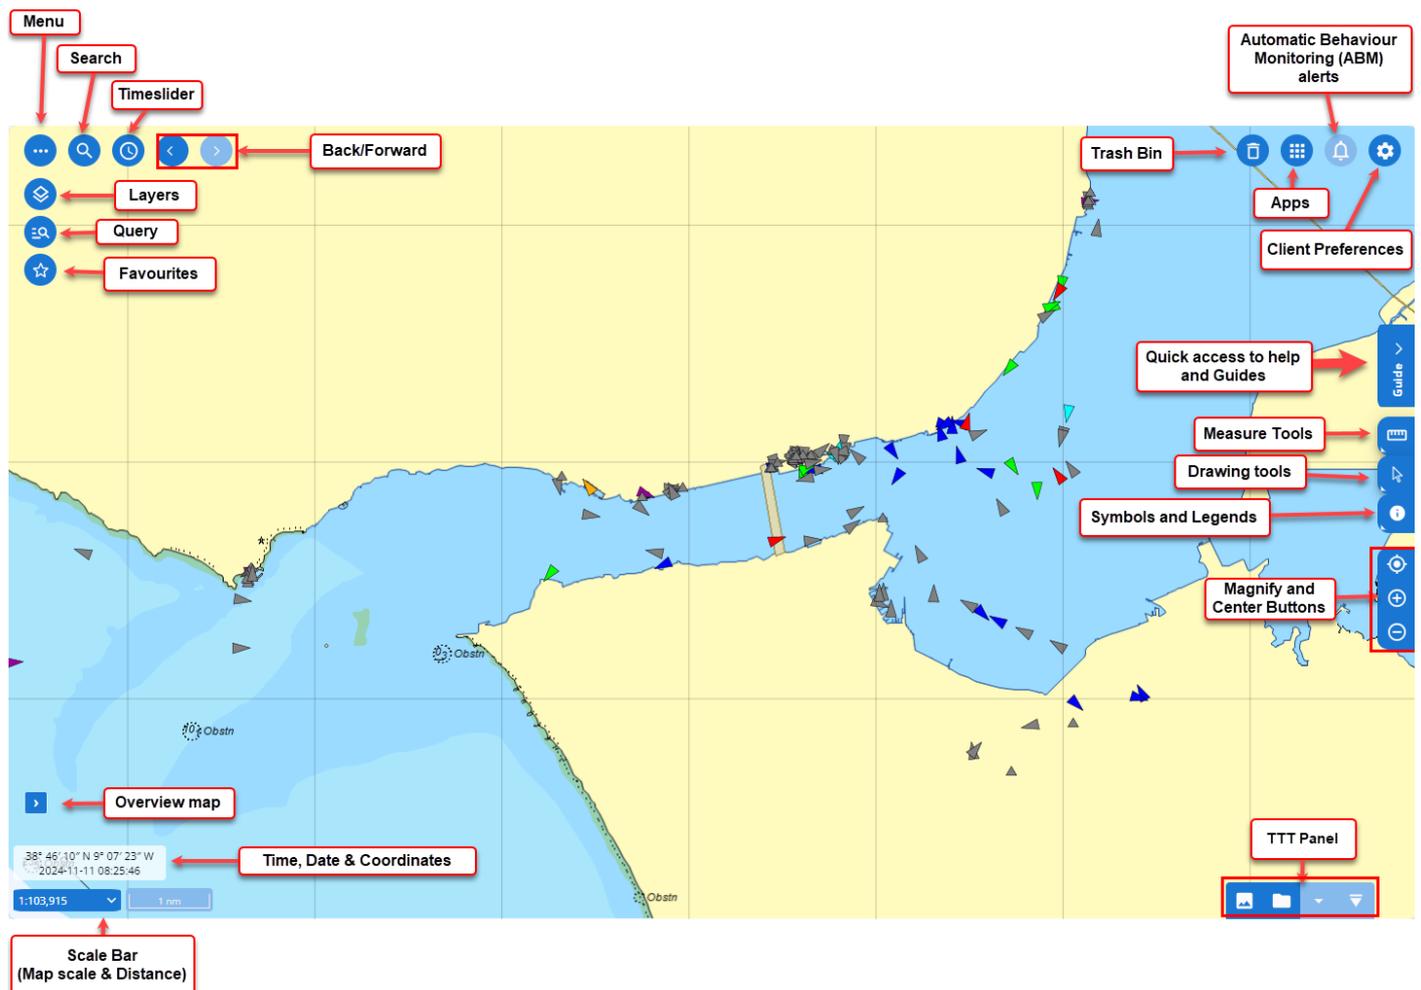

5.2 Preferences: Info and Operations

Under Client Preferences/Info tab, the user will see the Current Operation they are in. From here the user may be able to change to another Operation depending on the user rights and permissions. Operations may be created upon request to EMSA. From Vessel Position Source(s), the user may set the sources for the vessel position. In Client Preferences, information on User ID, User Name, Authority, Country, SEG release version, and Internet Browser and version are shown.

Figure 7 Client Preferences /Info/Current Operation

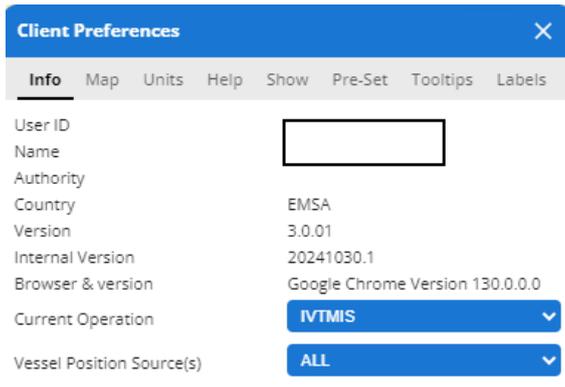

5.3 Client Preferences: Map Starting Viewpoint, Map overview and Coordinates grid.

Under Client Preferences/Map the starting viewpoint may be configured by the user. From here it is also possible to view or hide the Coordinates grid, the Map overview and the Map zoom animation. Furthermore, it is possible to set the desired projection as needed. The available projections are Plate Carrée, World Mercator, Spherical Mercator, North and South Polar, and North and South UPS.


The map starting viewpoint may be set as the Current geographical position or as User specified.

By selecting the “Current geographical position” and clicking on F5 (refresh page/window) on the keyboard the Map scale will be set to the scale defined in “User Specified”. By selecting the “User specified”, it is possible to do two different operations. The user may want to “Set to Current Centre and Scale”, then the map starting viewpoint will be updated accordingly, or the user may want to set a certain point of the map putting the coordinates in the box or selecting the central point through the cursor, after pressing the button “Center”.

To set a preferred scale the user can write in the field ‘Scale 1:’ the preferred scale and click F5. The map will be updated to that specific scale.

Selecting “Apply”, the coordinates will be saved, and the map will show that area every time the user logs into SEG.


Figure 8 Client Preferences/Map/Starting Viewpoint.

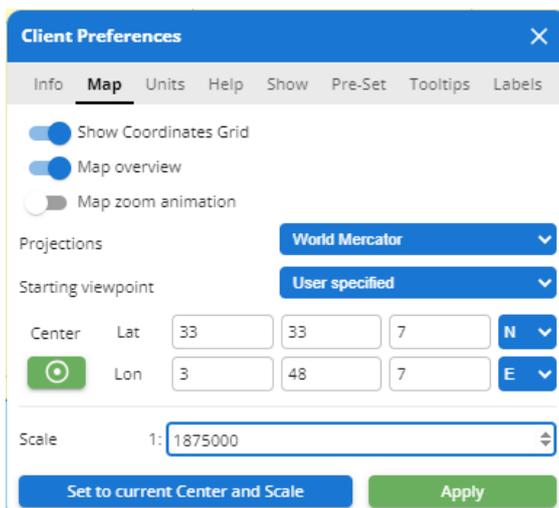

5.4 Client Preferences: Units

Preferred distance, area, coordinates, speed, volume and time units may be selected. Choice of Time format /Time zone and display of absolute or relative timestamp is also given.


Figure 9 Client Preferences/Units

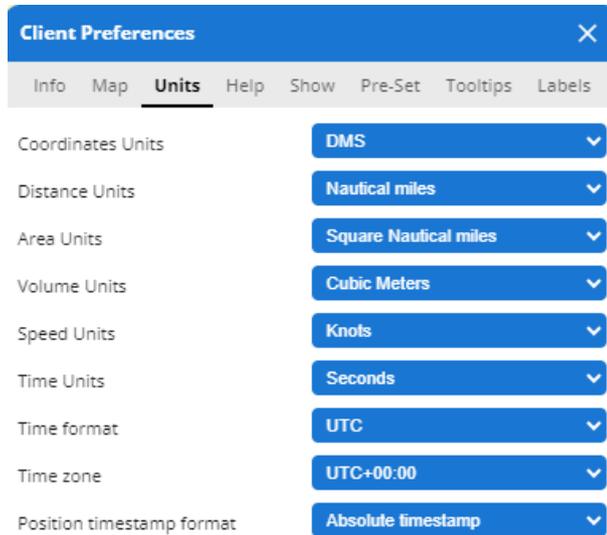

5.5 Client Preferences: Help

The user can access SEG user manual and tutorial videos by clicking on the links.


Figure 10 Client Preferences/Help

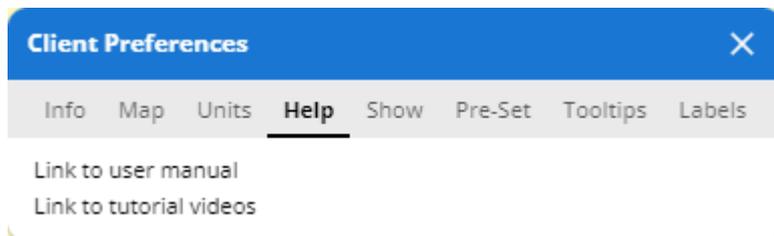

5.6 Client Preferences: Show

The user may show or hide some features of the map regarding general settings, vessels and EO Data. Under “General” the user may show or hide map magnify and center buttons and selection warning. In “EO Data” the user may show or hide recently detected spills and recently added EO Products.


Figure 11 Client Preferences/Show

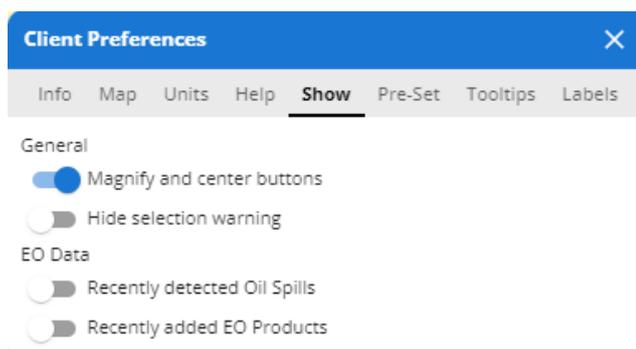

5.7 Client Preferences: Pre-Set

The user may add new Pre-Sets or use Published Pre-Sets. The Pre-Set Mode takes a snapshot of the user’s current SEG configuration and saves it so the user can reuse it later. The user must ensure that the coordinates of the place of interest are set in Client Preferences/Map/Center.


Figure 12 Client Preferences/Pre-Set

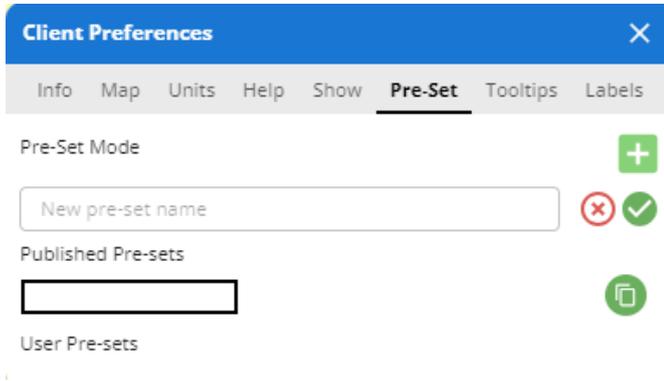

5.8 Client Preferences: Tooltips

When hovering over the relevant objects on the map with the cursor, some summary information on the target shall be displayed. Under “Tooltips” the user can customize contents that are being displayed.


Figure 13 Client Preferences/Tooltips

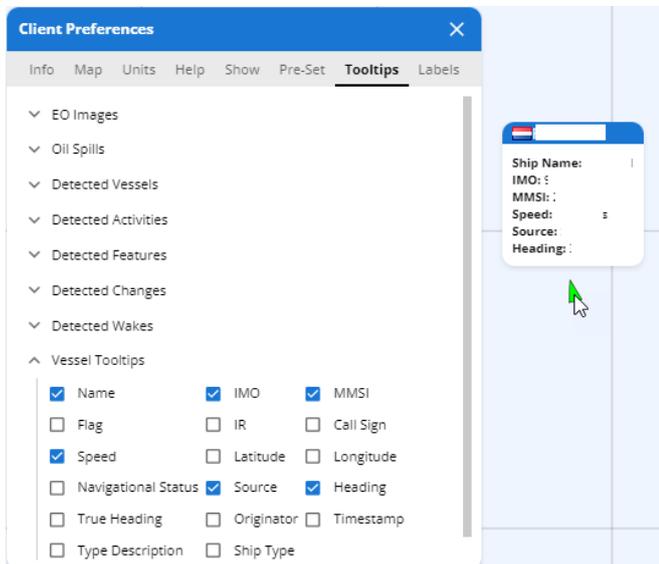

5.9 Client Preferences: Labels

The user can select what summary information is displayed on the map for placemarks, vessels and EO Images. Label activation scale may be set for each one of them.

Figure 14 Client Preferences/Labels

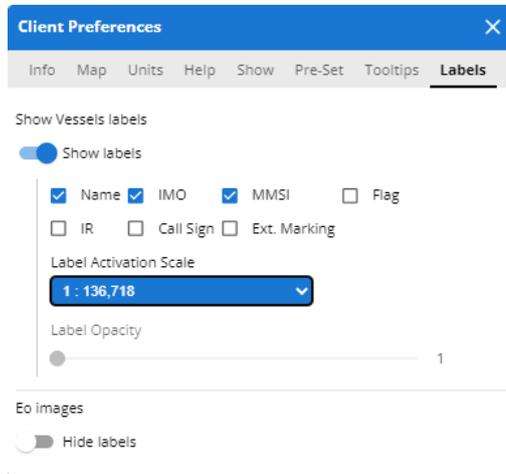


5.10 Map menu

Users only see menu items for data and functions that they have permission to access. If a menu item is greyed out, the menu item is de-activated because there is no associated information available.

Table 1 Map menu items

Menu Items	Description	Options
Client Preferences 	Manage client preferences	<ul style="list-style-type: none"> - Info - Map - Units - Help - Show - Pre-Set - Tooltips - Labels
Alert Notifications 	ABM alerts	The button is active if an alert is available and greyed out if no alert is available.
Apps 	Apps	<ul style="list-style-type: none"> - Import external files from the device of the user - Sentinel-Hub Data provides access to external Earth Observation layers from Sentinel-2 (recently acquired optical satellite imagery, 10m resolution) - ABM admin consents to request alert - Add a Traffic Density Map consents to create a traffic density map using filters based on area, ship type and period

Menu Items	Description	Options
Trash bin 	Removes recent queries	Remove all queries or remove selected queries only
Shortcuts 	Support user's operations	<ul style="list-style-type: none"> - Get track of the selectionated vessel - Add to TTT - Favourites to add the selected objects to a list
Filter out 	Select filters out	By choosing a category, remove all the objectes except those that are selected
Back/Forward 	Allow the user to move among the previous views of the map	
Time slider 	Change the time range of the vessel positions on the map for a max of -24 hours	Sliding time window. Change hour and minutes.
Smart Search 	<p>Quickly find and filter across all object categories (e.g. vessels, ports, Alerts, AOI, EO products, placemarks..).</p> <p>A minimum of 3 characters is required for the search. Searches for dynamic data layers on map: recent vessel information (<24 hours) and EO products (-3 days/+3 days)</p>	When typing the system will display all results where the text is part of the search elements. Returns the number of hits in each category. Selecting a category expands the list.
Advanced Search 	Search for vessels, EO data, oilspills and alerts with specific parameters. Must be used when searching for vessels that may have not reported a position within last 24 hours.	
Menu 	Expand or Close menu	<ul style="list-style-type: none"> - Layers - Query - Favourites
Layers 	Manage information layers on map	<ul style="list-style-type: none"> - Base layers - Placemarks - Alerts - Ports and Offshore Installations - EO Info - MetOcean - Organisations - Traffic Density Maps - Vessels - Areas - AOI

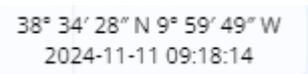Menu Items	Description	Options
Query 	Search within a specified area and time range	<ul style="list-style-type: none"> - Area (Centric Query) - Get Track - Get Profile - LRIT request - SAR SURPIC
Favourites 	Favourites are all elements on map that can be marked by users and associated to one or more Favourite Groups.	When creating a new group, the user sets the name and the color associated with it. The user may also select vessels in a certain area of interest by browse, coordinates or draw.
Time and Date 		Under Client Preferences/Units the user may choose to change co-ordinates units and time/date settings.
Scale Bar 	The scale bar changes as the user zooms in and out of the map.	The user can also choose a defined map scale from the drop down menu.
Measuring Tools 	Fixed Range Rings, Bearing Measure, Bearing Compass, Distance 	Click icon to expand and close menu
Symbols and Legend 	Set the symbology on the map by positions or track	Positions Symbology: <ul style="list-style-type: none"> - IALA - Data Source - Vessel Type - Target Age (Color & Opacity) - Voyage information - Data Source and SAT-AIS quality Track Symbology: <ul style="list-style-type: none"> - Position Source - In/Out SECA - Imported Positions - Same as trackline
Drawing Tools 	Place mark, Draw circle, Draw polygonal area, Draw rectangular area, Draw polygonal line, Drag Interaction, Selection by area, Selection by polygon 	Click icon to expand and close menu
Centre map (default), Zoom in, Zoom out	Zoom in and zoom out is available through the zoom in/out	Click to center and zoom in/out

Menu Items	Description	Options
	buttons over the map but using mouse left button. Standard 'left button hold' panning of the centre of the display is available as well.	
TTT panel - Tables, Thumbnails and Timeline 		<ul style="list-style-type: none"> - Open Timelines - EO Image Thumbnails - Open External Tables - View Tables - Registered Tables - Click to Expand/Collapse TTT - Dock/Undock TTT
Guide 	Help: Link to SEG Quick Start Guide Videos: Link to SEG Video Tutorials Help Videos	Click icon to expand and close menu

6. Layers management and filtering

The information visible in the map is managed by the Layers menu. Selecting one layer will expand a panel to the right with the related layers of that category. If an option is greyed out, this indicates a filter is applied and some information is not visible on the map.

Figure 15 Layers and filtering window

6.1 Information on layers and symbols

Information on symbols is available for the following layers: "Vessels", "EO info" and "Alerts".

For the vessel it is possible to choose the symbology based on Positions or Track. This is done by activating "Vessels" layer and clicking "Symbols and Legend" button located on the right of the screen. Information on symbology is available on the menu through the 'i' icon.



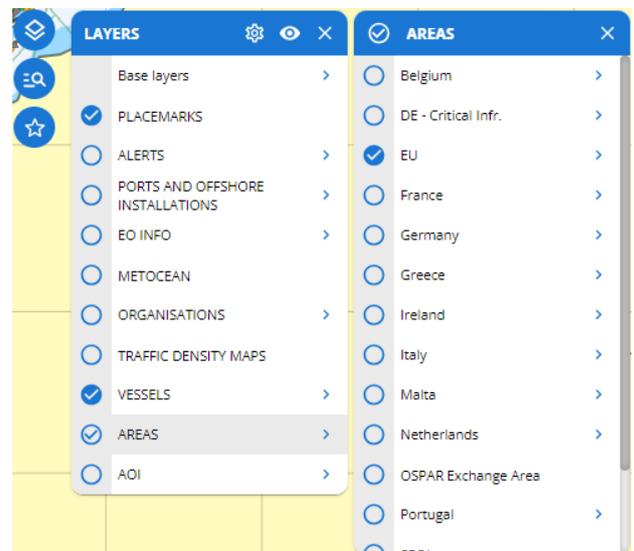


Figure 16 Information on the layers and symbols for vessel

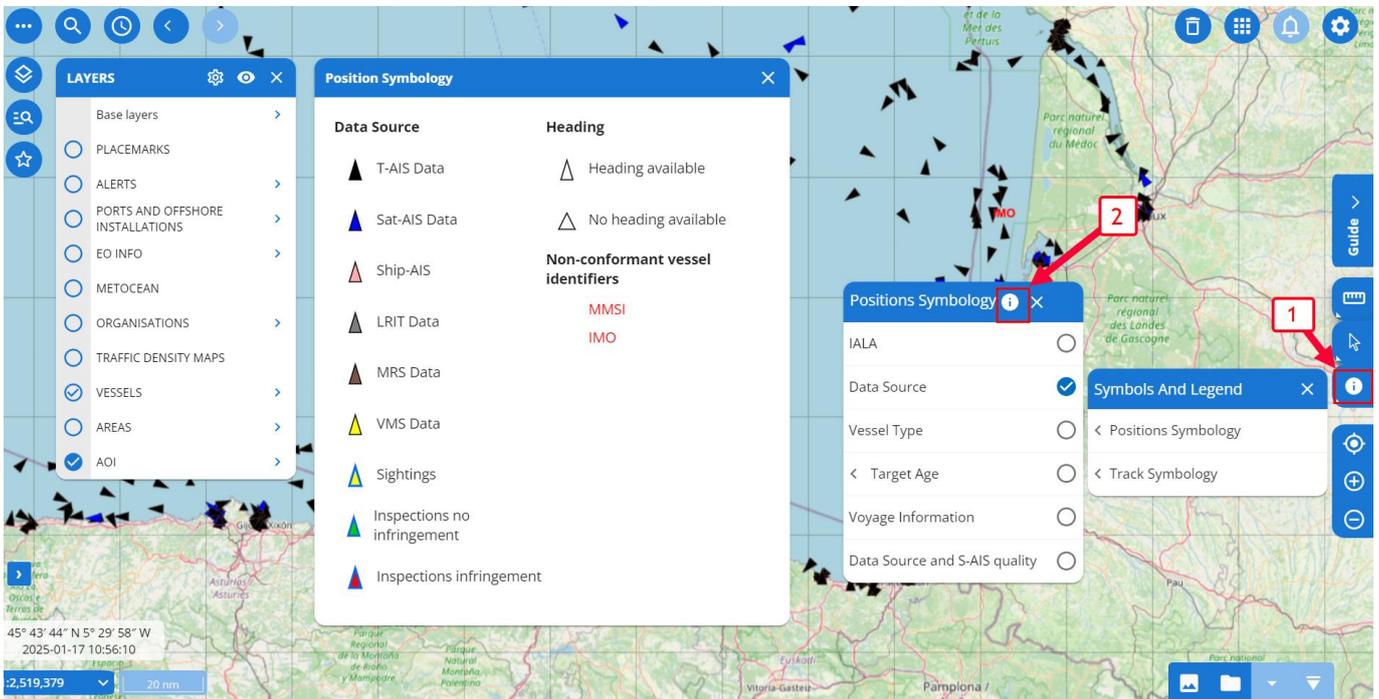

For the layers "EO info" and "Alerts", information and symbology are available on the top of the corresponding panel through the 'i' icon. In this case, the symbology is set and cannot be customized.

Figure 17 Information on the layers for EO Info and alerts

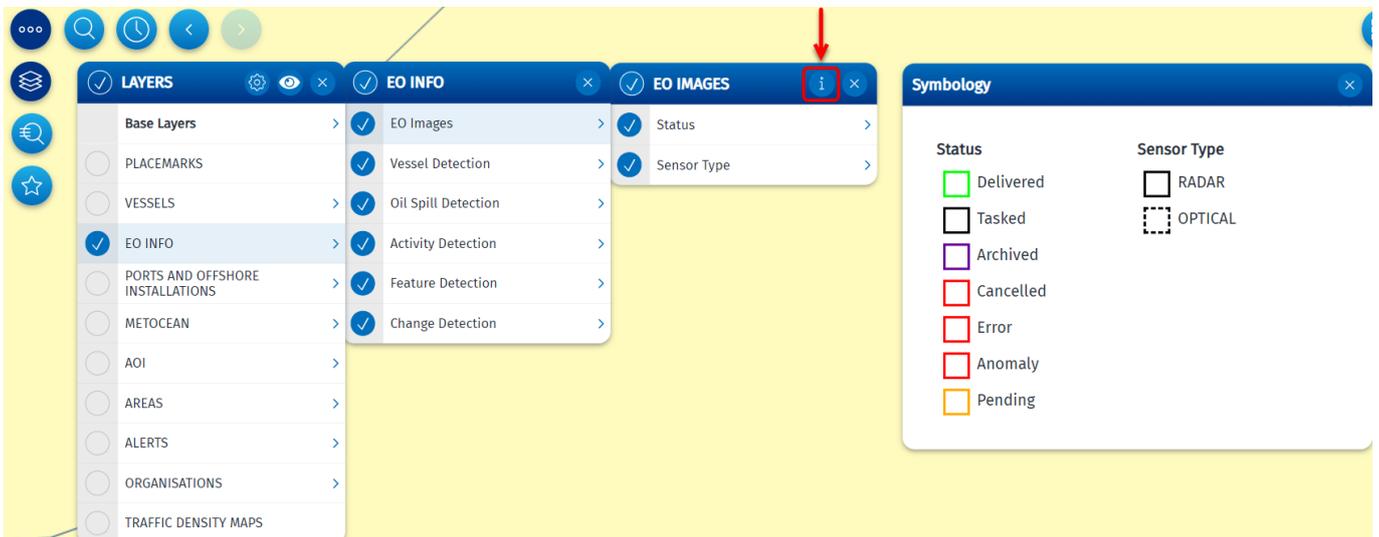


6.2 Layer settings


Settings may be managed by clicking on the cog  at the top of the Layers panel. Once selected, the cog turns grey and all the layers, except the Base Layers, become selectable and can be managed:

- Opacity: selecting the intended layers;

Select the layer, and choose the level of Opacity for that layer

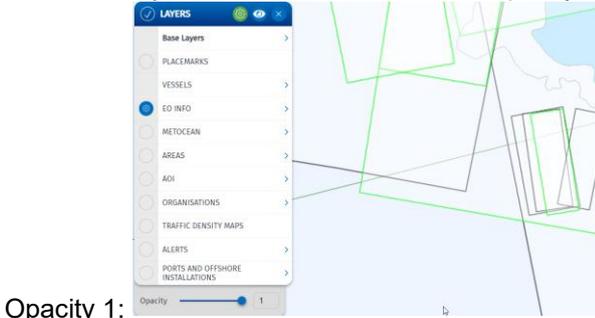

Opacity 1:

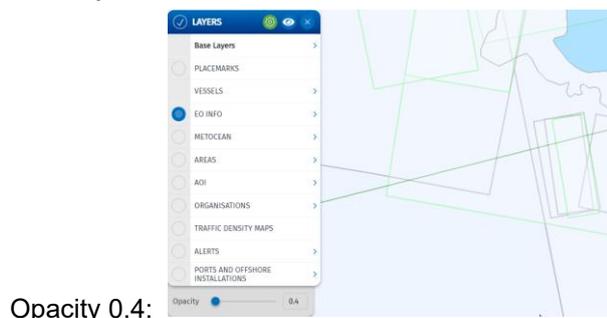

Opacity 0.4:

6.3 Map Projections and Base Layers

The SEG coordinate system is WGS 84. The default map projection is World Mercator (ESPG:3395). The user can select other projections by selecting Client Preferences/Map/Projection.


The preferred map base layer can be selected: nautical charts from CMAP (Base and Standard), OpenStreetMap and Bathymetry (EU and Global).

7. Vessel information

The most recently reported vessel position within the **last 24 hours** from any reporting source is displayed on the map (T-AIS, Sat-AIS, LRIT, VMS) according to the user's access rights.


The Layers menu allows the user to turn on and off the display of the vessel Positions on the map. The display of vessels' positions on the map can be filtered by: Voyage Information, Position Source, Vessel Type (PSC Types), Navigation Status (AIS), Vessel Flag, Voyage Plan, User Risk Status and Favourite Vessels.

Figure 18 Vessels Layer

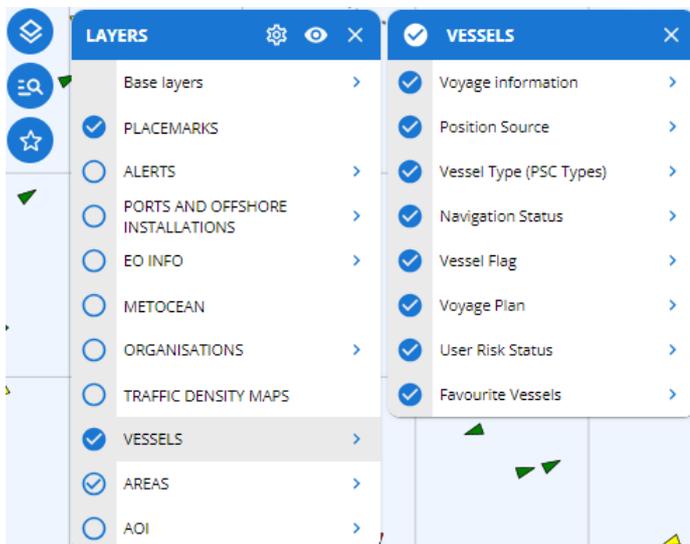

As reported in paragraph 6.1, the user may select which symbology to apply to the vessels and their track on the map. The available options for Position Symbology are the following: IALA, Data source, Vessel Type, Target Age, Voyage information and Data Source and SAT-AIS quality. The available options for Track Symbology are Position Source, Imported Position, In/Out SECA and Same as Trackline.

Figure 19 Vessel - Voyage information (SSN enrichment)

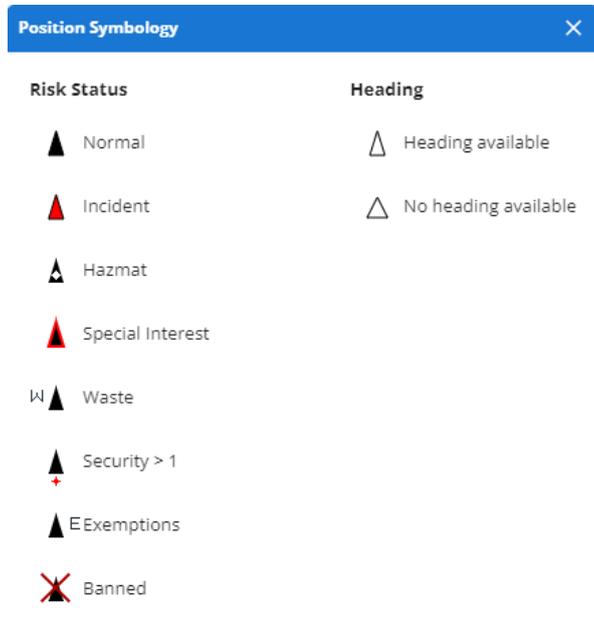


7.1 Tooltips

The tooltip shows summarised information for the object selected. The user may configurable tooltips for EO images, oil spills, vessel and detected vessel, activities, features, changes and wakes. Tooltips of an object are available moving the pointer along the screen and stopping it on the desired object.

For instance, Vessel tooltips are configurable from Client Preferences/Tooltips/Vessel Tooltips tab. The options available are Name, IMO, MMSI, Flag, IR², Call Sign, Speed, Latitude, Longitude, Navigational Status, (Position) Source, Heading, True Heading, Originator, Timestamp, Type Description and Ship Type.

Figure 20 Vessel Tooltip

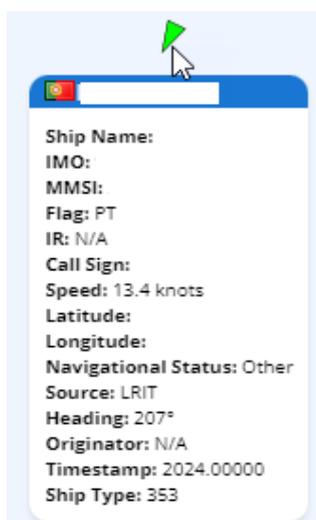


² The internal reference number is a unique vessel reference number for EU flag fishing vessels. It is established by the Regulation (EU) No 404/2011 and is composed by the MS code and a unique fishing vessel code.

7.2 Select vessels

Clicking on a vessel selects it. A blue circle surrounds the ship indicating it is selected.

Figure 21 Selected vessels indicated by blue circle

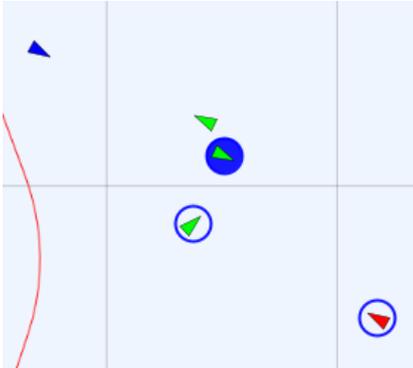


There are multiple ways to select multiple vessels.

One of the ways is by holding the Shift key and selecting vessels. Alternatively, the Draw Tool/Selection can be used to select one or more vessels.

The user may select multiple vessels by using the tool  available through Draw tools/Selection by Polygon. Once the polygon has been drawn, the vessels inside will be automatically selected.

The user may want to select more vessels in a specific area of interest. First of all, it is necessary to draw the area of interest by clicking on the Draw Tool and choosing the shape which is suitable for the purpose among circle, polygonal area and rectangular area. After that, by clicking Draw tool/Selection by Area , the vessels will be automatically selected.

Figure 22 Select vessels in an area of interest

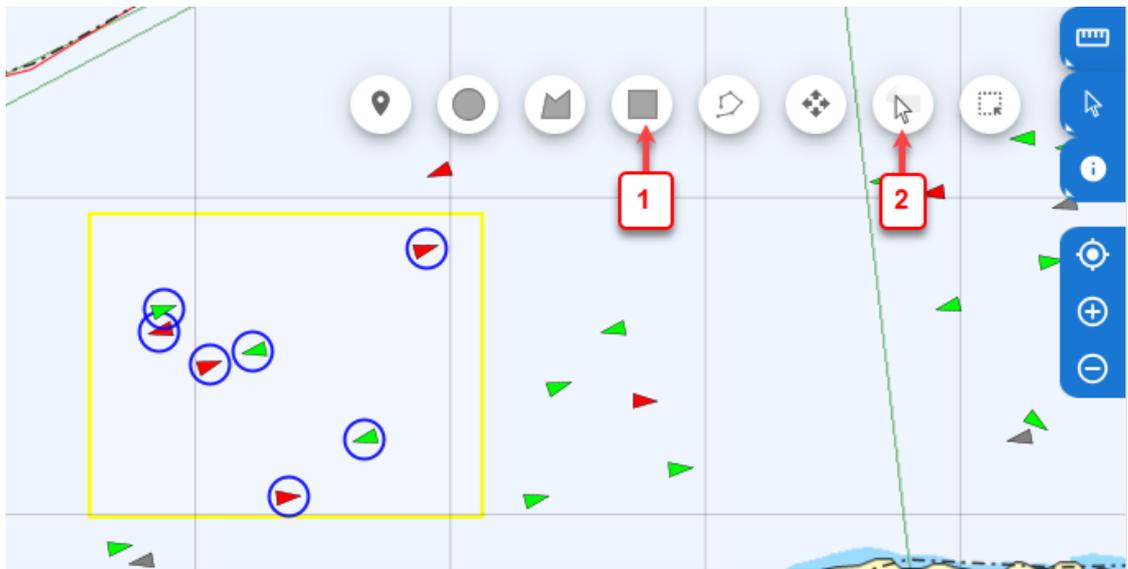

Once multiple vessels have been selected, the user can obtain a list of them with the main information shown in the TTT table by clicking on Shortcuts/Add to TTT.

7.3 Command and Info

Clicking on a vessel opens the Command and Info window with information on the vessel and the possibility to request more details about the vessel and its associated voyages.

The information available in the panel are “Vessel Info”, “Reported Information (AIS)” and “Position Report”.

- Vessel info: IMO, MMSI, IR, Call Sign, Flag, Type Description, Ship Type, Ship Length, Gross Tonnage, Ship Name.
- Reported Information (AIS): MMSI, IMO, Call Sign, Ship Name, Ship Type, Cargo Type.
- Position report: Timestamp, Latitude, Longitude, Speed Over Ground, Course Over Ground, Navigational Status, True Heading, Rate of Turn, Source, Originator.

In the grey row there is the possibility to obtain more information by selecting one of the following entries:

- Ship details: IMO, MMSI, IR, Call Sign, Flag, Type Description, Ship Type, Ship Length, Ship Breadth, Year of Construction, Gross Tonnage, Free Board, Ship Name.
- SSN/Voyage Information. By clicking on it, the user may access another kind of information (marked with green): Voyage Info, HAZMAT, Waste, Security, Bunkers and MRS. The same information is also available through the green buttons at the bottom of the Command and Info.
- Reported information (AIS): AIS Static Message, MMSI, IMO, Call Sign, Ship Name, Ship Type, Length (m), Width (m), Draught, Destination, ETA to Destination, Cargo Type, Positioning System.

Figure 23 Command and Info window with vessel and voyage information

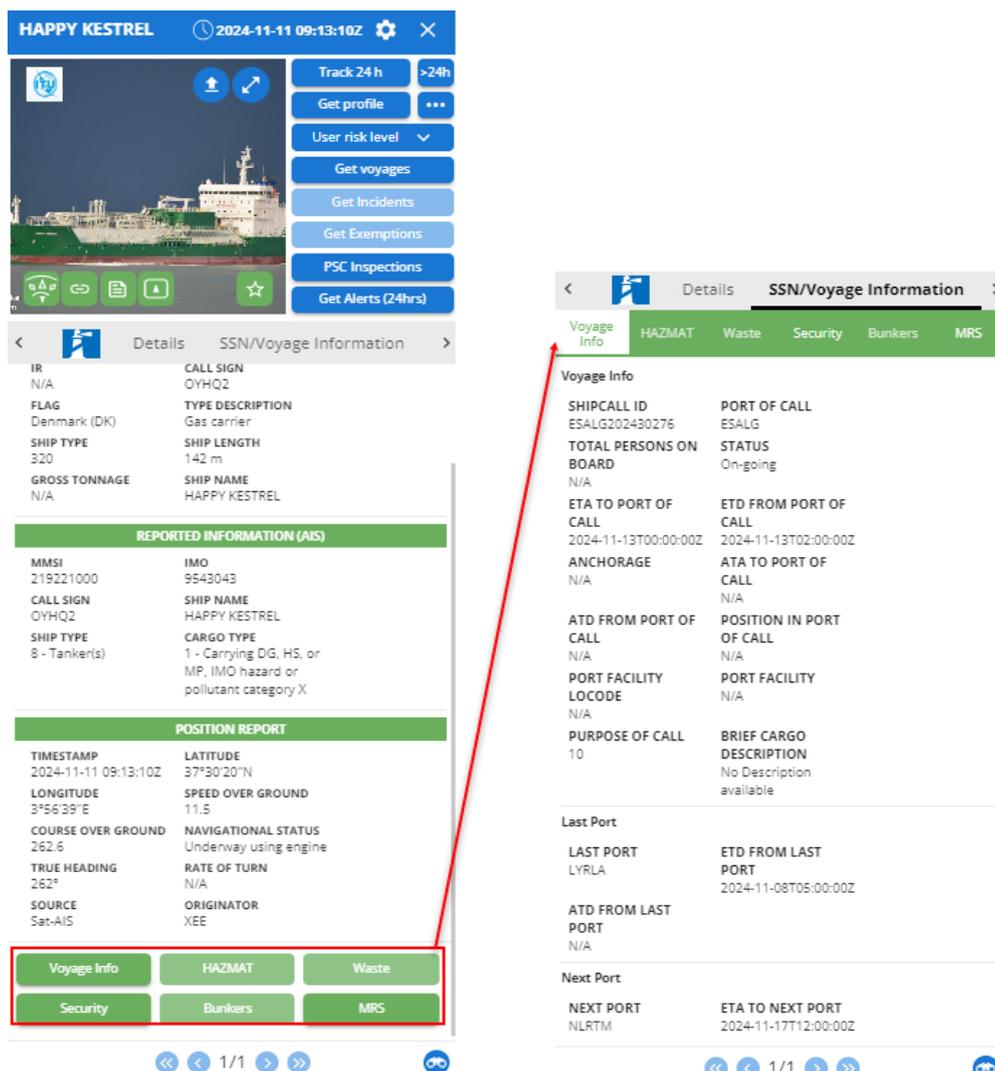
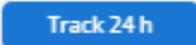


Table 2 Vessels Command and Info Window Functions

Menu Items	Description	Options
ITU – Mars Database 	External link to ITU website	
Upload image/GA plan 	Upload an image/General Arrangement Plan associated with a vessel	
Expand image 	Expand/close image to full panel mode	
Equasis 	External link to Equasis website	
Marine Traffic 	External link to Marine Traffic website	
Integrated Ship Profile (ISP) datasheet 	Integrated Ship Profile report generates an ISP Data Sheet (PDF file) with aggregated information on the vessel including last position received and recent SSN reporting information.	
Fisheries 	External link to the Community Fishing Fleet Register (CFR), from the European Commission. (For fishing vessels only)	
Add to Favourites 	Add the vessel to the user’s favourites list	<ul style="list-style-type: none"> - Add - Saved
Follow vessel 	Situate the location of the selected ship in the centre of the map. The map will move when the position reports are refreshed.	
	Contains the general information about the vessel and its position reported	<ul style="list-style-type: none"> - Vessel info - Reported Information (AIS) - Position Report
Track 24h  	The vessel track for the last 24 hours, derived from all the position reports the user is authorised to view. ‘Advanced’ historical track  allows selection of the tracking data system(s) used and the time period of interest.	<ul style="list-style-type: none"> - Position Sources - Fuse and smooth - SSN Enrichment - Extrapolate
Get profile  	The profile provides aggregated information on the vessel reported in SSN, and the vessel historical track for the last 24h derived from all the position reports the user is authorised to view. ‘Advanced’ profile  , allows a selection of information reported in SSN related to the ship for the time period specified by the user up to the last 12 months.	<ul style="list-style-type: none"> - Vessel Tracks per position source - SSN Voyage

<p>User Risk level</p> <p>User risk level ▾</p>	<p>The user may assign a risk level to a vessel. This categorisation is only seen by the user that assigns the risk level. It can be saved and re-used in another session.</p> <p>To remove the risk associated to the vessel just click on risk level and set it back to "None"</p>	<ul style="list-style-type: none"> - High - Medium - Low - None
<p>Get Voyages</p> <p>Get voyages</p>	<p>The TTT will present a Table with expected voyages (up to 10), the active voyage and most recent voyages (last 10 ship calls) reported in SSN.</p>	<p>The Table shows voyage information: Port of Call, ATA/ATD Port of Call, Anchorage (Y/N), ETA to Port of Call, ETD from Port of Call, Last Port, ETD from Last Port, Next Port, ETA to Next Port, POB, Position in Port of Call, Hazmat, Waste, Security</p>
<p>Get Incidents</p> <p>Get Incidents</p>	<p>The TTT will present a Table with Incident Reports associated with the vessel reported in SafeSeaNet. By selecting a row in the Table a pop-up window with details of the incident will be displayed. Access to this information is restricted to SSN authorised users</p>	
<p>Get Exemptions</p> <p>Get Exemptions</p>	<p>The TTT will present a Table with Exemptions associated with the vessel reported in SafeSeaNet. By selecting a row in the Table a pop-up window with details of the Exemption will be displayed.</p>	
<p>PSC Inspections</p> <p>PSC Inspections</p>	<p>Public information retrieved from THETIS for PSC inspections associated with the vessel</p>	
<p>Get Alerts (24hrs)</p> <p>Get Alerts (24hrs)</p>	<p>The TTT will present a Table with alerts associated with the vessel in the last 24 hours.</p>	

The Vessels Command & Info window displays information stemming from 3 different sources: an operational database of the SEG called OVR, the Central Ship Database (CSD) and from the position messages (T-AIS or SAT-AIS, LRIT or VMS).

The speed, position (latitude and longitude), navigational status, heading, true heading, come from the position messages (depending on the information source, T-AIS or, S-AIS, LRIT, or VMS). The source which has provided the last position is also shown.

The ship particulars (IMO, MMSI, Call Sign, flag, IR³ and Ship name, length, breadth) come from the OVR and if some information is missing from the OVR, supplemented with information from the CSD. If there is a discrepancy between the OVR and the CSD, the information from the OVR is displayed in red. Hovering over the symbol  the user can see the information available in CSD for that identifier.

³ Displayed only for European fishing vessels. The internal reference (IR) number is a unique vessel reference number for EU flag fishing vessels. It is established by the Regulation (EU) No 404/2011 and is composed of the MS code and a unique fishing vessel code.

The C&I panel also offers hyperlinks to three external sources for validating ship identifiers: Marine traffic, Equasis and ITU – Mars Database.

7.4 Voyage information

The Voyage Info button provides updated information on the current voyage of the vessel including:

- Voyage Info: Ship call ID, Port of Call, Total Persons on Board, Status, ETA to Port of Call, ETD from Port of Call, Anchorage, ATA to Port of Call, ATD from Port of Call, Position in Port of Call, Port Facility LOCODE, Port Facility, Purpose of Call, Brief Cargo Description.
- Last port: Last Port, ETD from Last Port, ATD from Last Port.
- Next port: Next Port, ETA to Next Port.


Information on dangerous and polluting goods (HAZMAT), Waste, Security, Bunkers and MRS, is also available from the row of green buttons on the bottom of the Command & Info panel.

The buttons are dark green (active) if the corresponding information is available and greyed out (inactive) if the corresponding information is not available.

By selecting one of the active buttons (HAZMAT, Waste, Security, Bunkers or MRS), the user is directed to the SSN/Voyage Information. Once in the SSN information Panel a summary of the available information is displayed.

The “More information” button requests SSN for more detailed information. Access to this information is restricted to SSN authorised users.

Figure 24 Voyage detailed information from SafeSeaNet

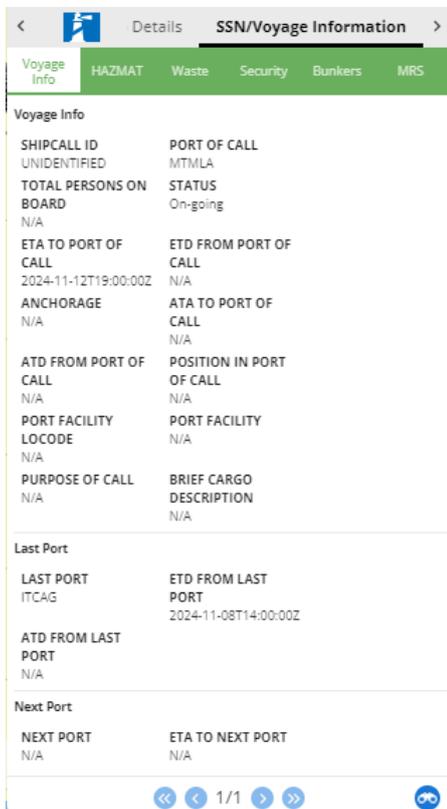

7.5 Get voyages

The TTT will show a new Tab with a Table of the voyages associated with the vessel. The button is dark blue (active) if the Voyage information is available and greyed out (deactivated) if corresponding information is not available.

This information has been reported in SafeSeaNet. Access to this information is restricted to SSN authorised users.

The table includes the active (current) voyage, the next planned voyages (up to 10 planned voyages) and the last 10 last voyages. The Table contains the following information: Port of Call (LOCODE/Location name), ATA to Port of Call, ATD from Port of Call, Anchorage, ETA to Port of Call, ETD from Port of Call, Last Port, ETD from Last Port, Next Port, ETA to Next Port, POB Voyage towards Port of Call, POB Voyage towards Next Port, Position in Port of Call, HAZMAT (Y/N), Waste (Some/ None/All), Security (SL1/SL2/SL3).

7.6 Get Incidents

The TTT will show a new Tab with a Table of active Incidents associated with the vessel. The button is dark blue (active) if the Incident information is available and greyed out (deactivated) if corresponding information is not available. This information has been reported in SafeSeaNet. Access to this information is restricted to SSN authorised users.

By selecting the Get Incidents button, the TTT panel tabular view will open and show the Incident ID and the Incident type. To request more details from SSN the user needs to click on the row in the Table. A new window with further details of the selected Incident report will be displayed.

Figure 25 Get Incident of a vessel

The screenshot displays the vessel tracking interface for the vessel NISSOS RHENIA. The interface is divided into several sections:

- Top Panel:** Shows the vessel name 'NISSOS RHENIA', a timestamp '2024-11-11 09:51:33Z', and various action buttons like 'Track 24h', 'Get profile', 'User risk level', 'Get voyages', 'Get Incidents', 'Get Exemptions', 'PSC Inspections', and 'Get Alerts (24hrs)'.
- Map:** A map showing the vessel's current position and historical track.
- Ship Details:** A tabular view showing 'VESSEL INFO' and 'REPORTED INFORMATION (AIS)'.

VESSEL INFO	
IMO	9845685
MMSI	538008316
IR	N/A
CALL SIGN	177A2229
FLAG	Marshall Islands (MH)
TYPE DESCRIPTION	Oil tanker
SHIP TYPE	313
SHIP LENGTH	333 m
GROSS TONNAGE	N/A
SHIP NAME	NISSOS RHENIA

REPORTED INFORMATION (AIS)	
MMSI	538008316
IMO	9845685
CALL SIGN	177A2229
SHIP NAME	NISSOS RHENIA
SHIP TYPE	8 - Tanker(t)
CARGO TYPE	0 - Not specified
- Position Report:** A table showing real-time position data.

POSITION REPORT	
TIMESTAMP	2024-11-11 09:51:33Z
LATITUDE	49°25'54"N
LONGITUDE	0°16'9"E
SPEED OVER GROUND	N/A
COURSE OVER GROUND	317.5
NAVIGATIONAL STATUS	At Anchor
TRUE HEADING	53°
RATE OF TURN	3
SOURCE	T-AIS
ORIGINATOR	FR
- Incident Details (Incident Waste):** A detailed view of a selected incident.

Incident Waste	
Authority Reporting the Incident	
Authority Name	Le Havre Port
LoCode	FRLEH
Phone	N/A
Fax	00
Email	N/A
Vessel	9845685
Voyage Information	
Port of Departure	ZZUKN
Port of Destination	ZZUKN
Number of Persons	N/A
IRVessel Identity Verified	
Ship Name	N/A
Call Sign	N/A
IMO	9845685
Flag	N/A
MMSI	
- Incidents Table:** A table showing a list of incidents for the vessel.

Incidents Vessel #1804060	
Showing items 1 to 1 of 1	
1	

The incidents will only be available for a limited time depending on the incident type. The following table shows the number of days an incident is available per type of incident reported.

Table 3 Incident type

Incident type	Days available
POLREP	30 days
Waste – waste undelivered	15 days
Failed Notification	15 days
Vessel Traffic Rules Infringement	15 days
Banned Ship alert	15 days
Insurance Failure	15 days
Pilot or Port Report	15 days
Other	15 days
SITREP	30 days
Lost and Found Objects (LFC)	3 days

7.7 PSC Inspections

The TTT will show a new Tab with a Table of PSC Inspections associated with the vessel. The button is dark blue (active) if PSC information is available and greyed out (deactivated) if corresponding information is not available.

The information shown is public information retrieved from THETIS.

The following information is provided: Place of inspection, Inspection ID, Date of Final Visit, Date of First Visit, Inspection Type, Number of deficiencies, Reporting Authority, Detained, Duration of Detention.

By selecting a row in the Table, a new window with further details of the selected Inspection will be displayed. The information available regards Inspection Details, Ship Particulars, IMS Company and Detention.

7.8 Get Alerts (24 hrs)

The TTT will show a new Tab with a Table of Alerts that have been triggered for this vessel within the previous 24 hours. The button is dark blue (active) if Alerts is available and greyed out (deactivated) if Alerts are not available.

The information is only for users which have permission to receive personalised alerts from Automatic Behaviour Monitoring (ABM) tools.

7.9 Get Exemptions

The button is dark blue (active) if Exemption information is available and greyed out (deactivated) if corresponding information is not available. The TTT will show a new Tab with a Table of valid (active) Exemptions associated with the vessel. This information has been reported in SafeSeaNet and is only available to authorised SSN Users. By selecting a row in the Table, a new window with further details of the selected Exemption will be displayed. All the exemption types are reported in the following table:

Table 4 Exemption type

Exemption type
Pre-Arrival
HAZMAT
Security
Waste Notification
Waste Delivery
Waste fees
Crew and Passengers
Crew and Passengers derogation

8. EO Info: images and products

By turning on the Earth Observation (EO) Info layer, the SEG will display the frames of the satellite images planned (or 'Tasked') to be acquired ('EO Acquisitions') in the next 72 hours (+3 days) as well as the frames of the EO images which have been delivered within the last 72 hours (- 3 days).

The user will see only the EO data for the operation(s) they have permission to view. Under the EO Info Layer, ensure that all sub-layers of EO Images are selected: Status and Sensor Type (RADAR and OPTICAL).

Products refer to the objects which have been detected, or derived, from analysis of the satellite imagery, for example, detected vessels, oil spills, activities, features and changes.

The Frames are colour coded to indicate their status (e.g. delivered, tasked, archived, cancelled/error/anomaly and pending). The Symbology for the SAR imagery layer and the Optical imagery layer may be displayed using the "i" on the top of the EO Images panel.

Services (images and oil spills) acquired in the past can be searched using the **Advanced Search** function. A time window and/or an area query must be defined. The Advanced Search may also be used for a search for a specific service ID. Products or Objects detected on the image such as oil spills and detected vessels can be searched for an unlimited time.

It is possible to view EO images up to 18 months (rolling window) in the past. Images older than 18 months will have a status 'Archived'. The image acquisition frame will be visible. Upon a user request to EMSA "Archived" images may be retrieved and made visible on the map.


Figure 26 EO images (planned frames and delivered images displayed on map) and Symbology



8.1 Tooltips

Tooltips showing summarised information for the selected EO scene. Tooltips are configurable from the Client Preferences/Tooltips.

Figure 27 Tooltip EO Scene

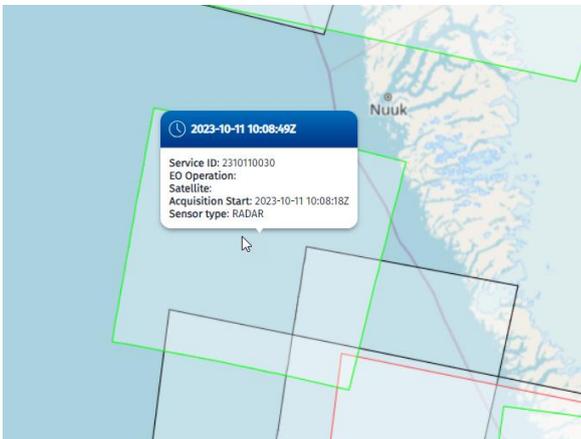

8.2 Command and Info

Clicking on an EO scene highlights the scene selected and opens the “EO Command and Info” window. Clicking on the Camera icon  displays the EO image on the map. Clicking on the Edit Image icon  allows the user to edit the EO image Brightness, Contrast and Alpha settings. Clicking on the Camera icon again removes the display of the EO image from the map.

The Command and Information window provides details on the EO image. Depending on the Operation you are in, the EO Command and Info Window allows the user to show or hide information on the map, including Potential Oil Spills, Detected Activities, Detected Features, Detected Changes, Detected Wakes, Detected Vessels, and SAR Wind and Swell information.

In the bottom of the C&I window there are 3 green buttons.


The ‘Download EO’ button allows the user to save the image locally. As a pre-condition for access, users are requested to confirm compliance with the EO End User License Agreement.

The ‘Feedback’ button allows the user to see if the competent authorities of the MS have confirmed or denied the presence of the detected object. The button dark green (active) if the Feedback information is available and greyed out (deactivated) if corresponding information is not available.

The ‘Alert Report’ button allows the user to save the Alert reports which are generated by the service and usually sent by email. For the CleanSeaNet oil spill and vessel detection service these can be CleanSeaNet Reports, Alert Reports and Oil spill warnings. The reports are customised for each country, so the exact layout and information depends on the user.

User can get more information on selected EO image by clicking “EO Details” in the Command and Info panel. Reported information is the following: Service ID, Status, EO Operation, DTO ID, Satellite, Acquisition Start, Acquisition Stop, Total VDS, VDS Re-correlated, Last Re-correlation date, Sensor Type, Sensor Mode, Sensor Resolution [m], Affected Areas, Pass, Polarization Channels, Coverage, Usable Area [%], Feedback, Polygon, Band Combination, Swath Identifier, Polarization Mode, Product Type, Acquisition Station, Cloud Cover [%], Quality-Cancellation Anomaly Report, Total Oil Spills, Total Activities, Total Change Detections, Total Detected Features and Total Wakes.

Figure 28 EO Scene Command and Info Window

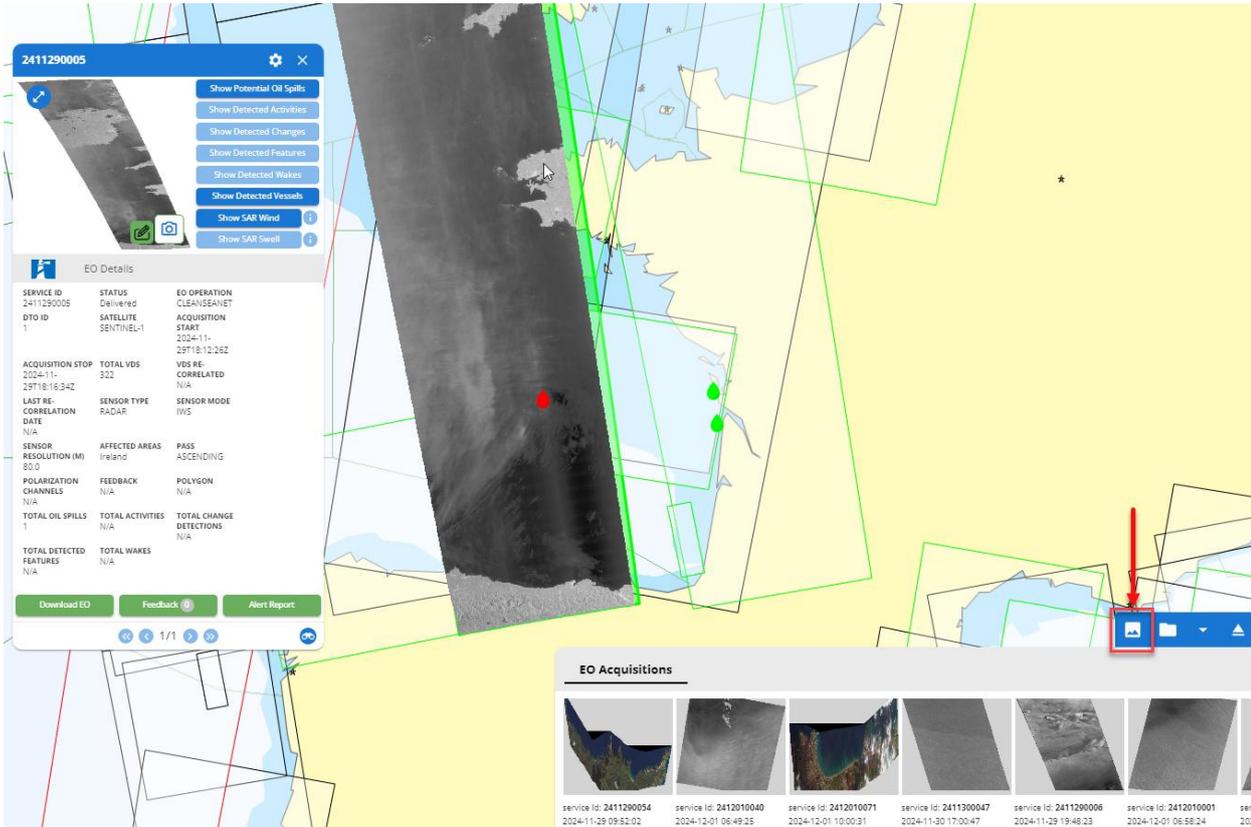

As indicated in the previous figure by the red arrow, the user may access EO Acquisitions as well by clicking on the button “EO Images Thumbnails” on the bottom of the screen.

Table 5 EO Command and Info

Menu items	Description	Options
Expand/Collapse 	Expand/Collapse the image in full panel mode	
Show or hide EO image on map 	Show or Hide EO image on map	on and off map
EO Image settings 	Manage and reset EO image Brightness, Contrast, Alpha	
Show/Hide potential Oil Spills Show Potential Oil Spills	Show or hide all possible spills detected in this service on top of the image and in tabular view.	on and off map
Show/Hide Detected Activities Show Detected Activities	Show or hide activities detected in this service on top of the image and in tabular view.	on and off map
Show/Hide Detected Features Show Detected Features	Show or hide features detected in this service on top of the image and in tabular view.	on and off map

<p>Show/Hide Detected Changes</p> 	Show or hide changes detected in this service on top of the image and in tabular view.	on and off map
<p>Show/Hide Detected Wakes</p> 	Show or hide wakes detected in this service on top of the image and in tabular view.	on and off map
<p>Show/Hide Detected Vessels</p> 	Show or hide vessels detected in this service on top of the image and in tabular view. Vessels are displayed as correlated or uncorrelated, with estimated heading, if known.	on and off map
<p>Show/Hide SAR Wind</p> 	Show or hide wind speed and direction detected in this service on top of the image	<ul style="list-style-type: none"> - on and off map - By clicking on the 'i' button, the legend is shown
<p>Show/Hide SAR Swell</p> 	Show or hide SAR wave swell and direction detected in this service displayed on top of the image	<ul style="list-style-type: none"> - on and off map - By clicking on the 'i' button, the legend is shown
<p>Download EO</p> 	Download the EO product. The button is deactivated (greyed out) if information is not available. When the download is completed, a copy of the request is stored in the Recent tab.	Accept the End User License Agreement before the download starts.
<p>Feedback</p> 	Show the feedback given by the competent authorities of the MS of reference	Inside the grey circle, there is the number that indicate the amount of the feedback available for that EO image
<p>Alert Report</p> 	Download alert reports for that image. The button is deactivated (greyed out) if information is not available. When the download is completed, a copy of the request is stored in the Recent tab.	

8.3 Potential Oil spills

Potential oil spills are displayed on the map as oil droplets, or as polygons, depending on the zoom level. By hovering over an oil droplet or a polygon a Tooltip with summary information on the possible spill is displayed. Information on all the potential spills on the map is available from the TTT panel by selecting the entry "Oil Spills" in the "Registered Tables" button on the bottom of the screen.

Clicking on the oil droplet or polygon will open the Command and Info window. The user may select more potential oil spills following 2 ways: holding the Shift key and then selecting multiple droplets, or, using the proper tool  available through Draw tools/Selection by Polygon. After selecting the oil spills, the user can see them in a tabular view by clicking Shortcuts/Add to TTT.

Detected oil spills are shown in different colours which indicate their class. The symbology is available by clicking the 'i' button on the Layers/EO Info/Oil Spill Detection panel. The colour of the droplet is based on the confidence level of the detection: the spills marked in red have a higher detection confidence level and the spills marked in green have a lower detection confidence level. The spills marked in orange are not classifiable.

Figure 29 Potential oil spill shown as droplets on map and TTT panel.


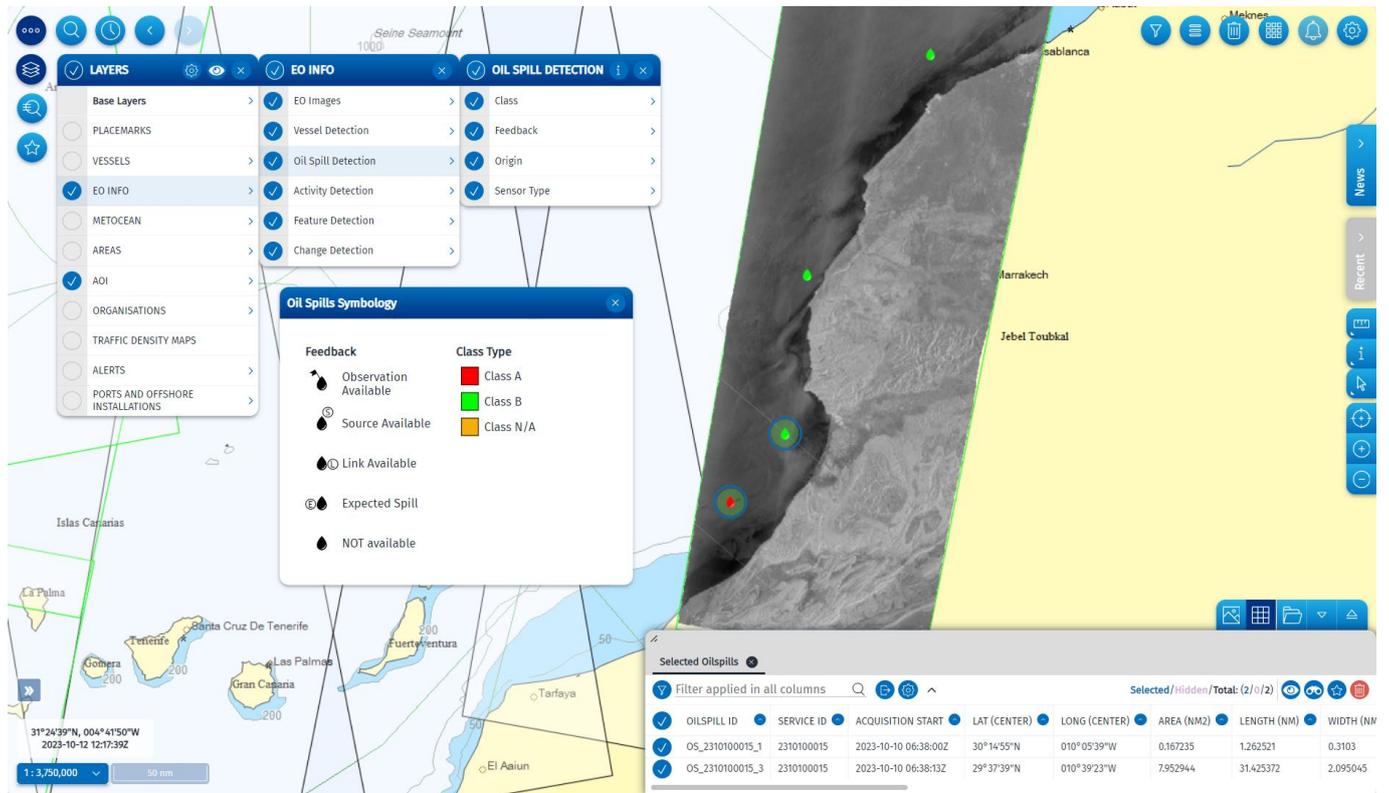


Figure 30 Potential oil spill shown as a polygon on the map

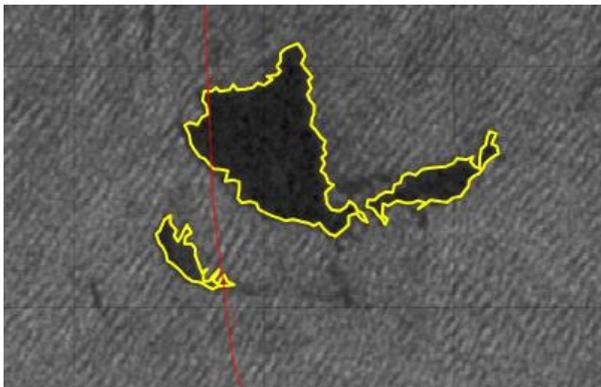

8.4 Detected Vessels

Vessels which are detected in the EO image are reported as correlated or non-correlated. A correlated vessel refers to a target, which has been detected on the EO image, that has been cross-referenced and associated with a reporting position from a vessel (T-AIS, VMS, LRIT, SAT-AIS) for which the user has permission. A non-correlated vessel shows that the service was unable to associate a reporting position.

Figure 31 Detected vessels – correlated and non-correlated.

Vessel Detection Symbology

Correlation		Heading	
▲	Correlated	▲	Heading available
▲	Uncorrelated	▲	No heading available

Status	
★	New Detection
✓	Confirmed
✗	Discarded

VDS ID	SERVICE ID	ACQUISITION START	CORRELATED	CONFIDENCE LEVEL OF DETECTION	LATITUDE
2310270001_S1A_EWS_20231027_082318_VDS_1	2310270001	2023-10-27 08:22:56Z	Yes	86	37°16'07"
2310270001_S1A_EWS_20231027_082318_VDS_10	2310270001	2023-10-27 08:23:14Z	Yes	99	36°23'27"
2310270001_S1A_EWS_20231027_082318_VDS_11	2310270001	2023-10-27 08:22:47Z	Yes	99	38°02'26"
2310270001_S1A_EWS_20231027_082318_VDS_12	2310270001	2023-10-27 08:20:56Z	Yes	75	44°43'52"

The VDS details are available in the Table as a new Tab. By clicking on a table row, a C&I window opens for the VDS object.

Figure 32 VDS Object C&I window

2411080011_S1A_IWS_20241108_183709_VDS_267

Area Query | Select Vessel

Correlated Position | Correlated Vessel

VDS ID	SERVICE ID	ACQUISITION START
2411080011_S1A_IWS_20241108_183709_VDS_267	2411080011	2024-09-09 00:00:00
CORRELATED	CONFIDENCE LEVEL OF DETECTION	LATITUDE (CENTER)
Yes	99	38°42'34" N
LONGITUDE (CENTER)	VESSEL TYPE (FROM EO)	CONFIDENCE LEVEL OF TYPE (FROM EO)
9°51'40" W	N/A	N/A
VESSEL TYPE (FROM AIS)	ESTIMATED LENGTH (M)	ESTIMATED WIDTH (M)
PASSENGER VESSELS	237	35
ESTIMATED HEADING (°)	ESTIMATED SPEED	SPEED CLASSIFICATION
352	N/A	N/A
LENGTH CLASS	LENGTH ERROR	WIDTH ERROR
N/A	N/A	N/A
POS ACCURACY X	POS ACCURACY Y	EO OPERATION
N/A	1	CLEAN/SEA/NET
STATUS	IMSI	IHO
N/A	311000987	9123552
SHIP NAME	CALL SIGN	DIMENSIONS
BOREALIS	N/A	270
LONGITUDE (CENTER)	LATITUDE (CENTER)	ACQUISITION START
9°51'40" W	38°42'34" N	2024-09-09 00:00:00

Alert Report

EO 2411080011 VDS Positions

Showing items 301 to 350 of 561

VDS ID	SERVICE ID	ACQUISITION START	CORREL
2411080011_S1A_IWS_20241108_183709_VDS_298	2411080011	N/A	Yes
2411080011_S1A_IWS_20241108_183709_VDS_177	2411080011	N/A	Yes

Clicking on 'Select Vessel' button on the VDS C&I window directs the map to the most recently reported position of the identified vessel.

8.5 SAR Wind and Swell

Wind and swell information derived from the SAR image may be displayed on the map. By clicking on the 'i' button, a new window showing the legend will appear on the screen.

Figure 33 SAR wind


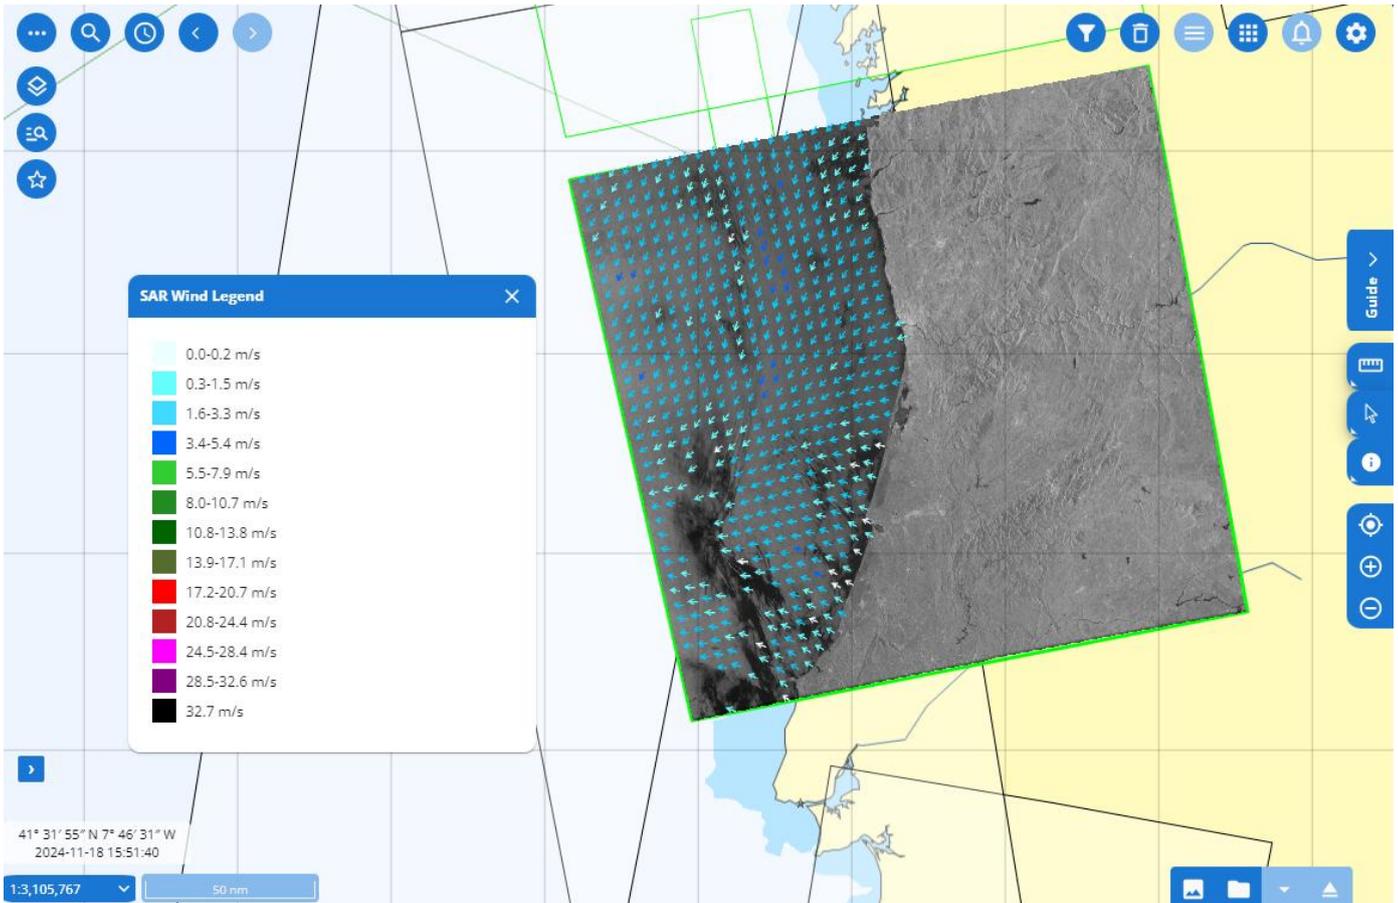


Figure 34 SAR swell

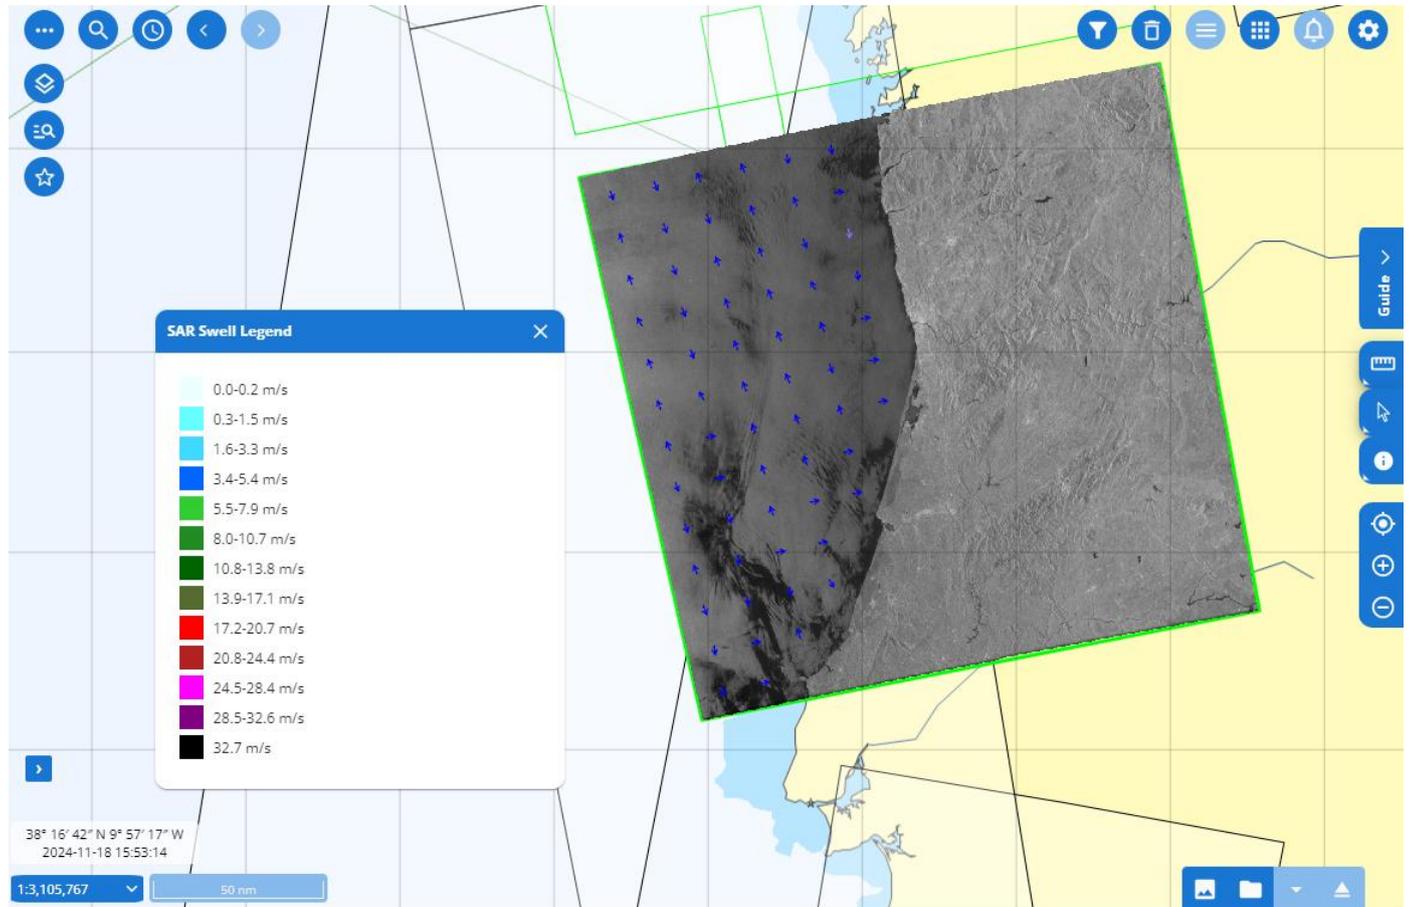


9. Organisations

The organizations information is available from the Central Organizations Database (COD) and is displayed in the SEG through the Organisations layer in the menu. Maritime Authorities information as declared by Member States to carry out the VTMIS functions in accordance with Directive 2002/59/EC (Article 22) are displayed in SEG. Selecting Maritime Authorities layer will expand a panel to the right with the related duties layers.

It is possible to display organisations on a map; Search for organisations based on name; Filter organisations based on duties (e.g. SSN NCA, MAS, VTS, etc.): Find contact details (address, phone, e-mail, etc.) of different organisations. Shows areas of responsibility associated to a duty.

Figure 35 Organizations Layer and filtering window

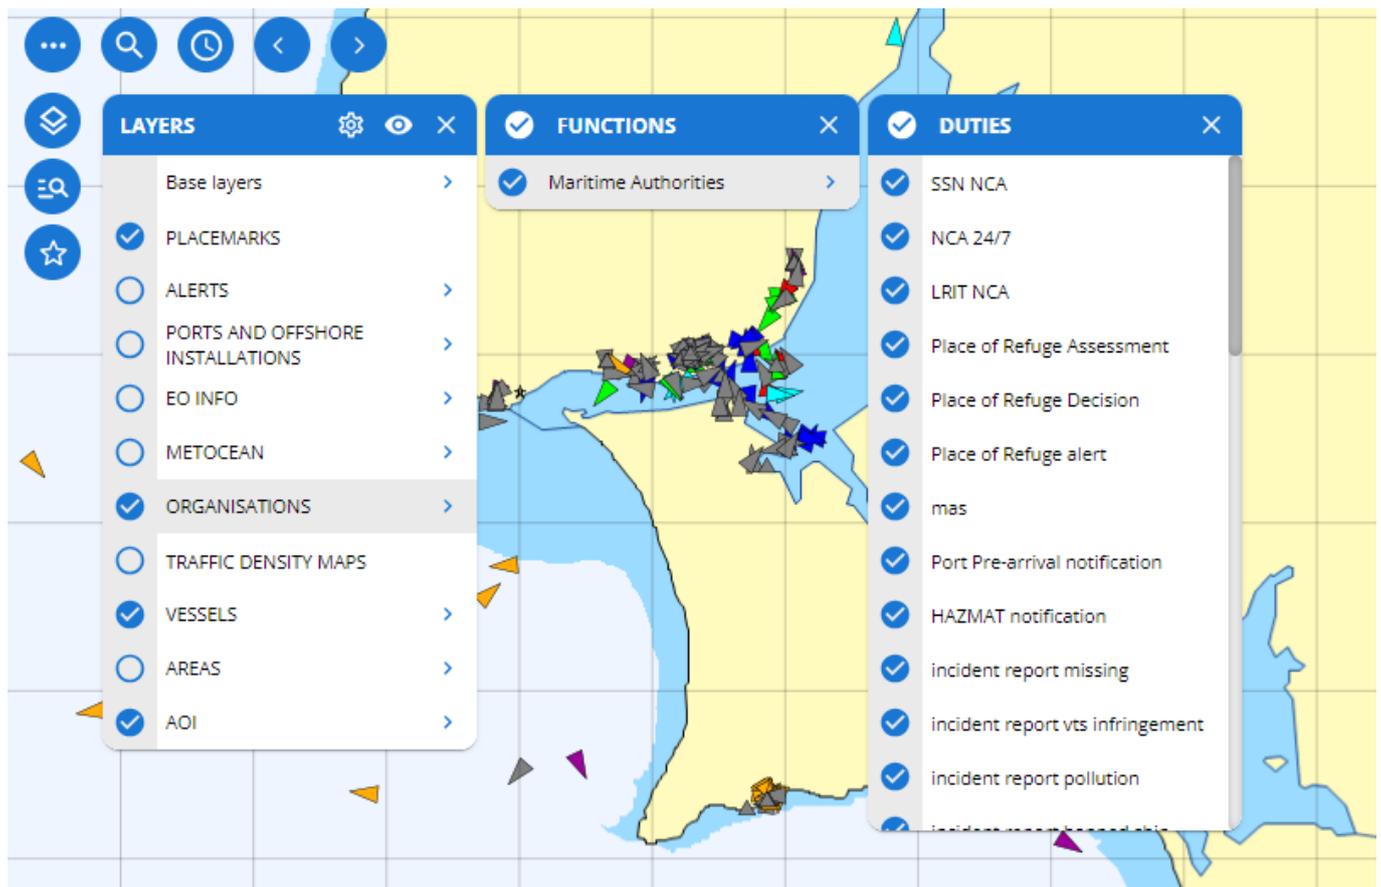


9.1 Organisations Tooltips and Command & Info

The organizations are displayed in the map with this symbol . By selecting an organization, the tooltip shows summarised information for the organization selected.

Clicking on an organization, selects it. A blue circle surrounds the organization indicating it is selected. It also opens the Command & Info window which presents more detailed information for the selected organization and allows to list the duties associated to it ([List duties](#)). The list of duties is available from the TTT panel.

Figure 36 Organization Tooltip and Command & Info window

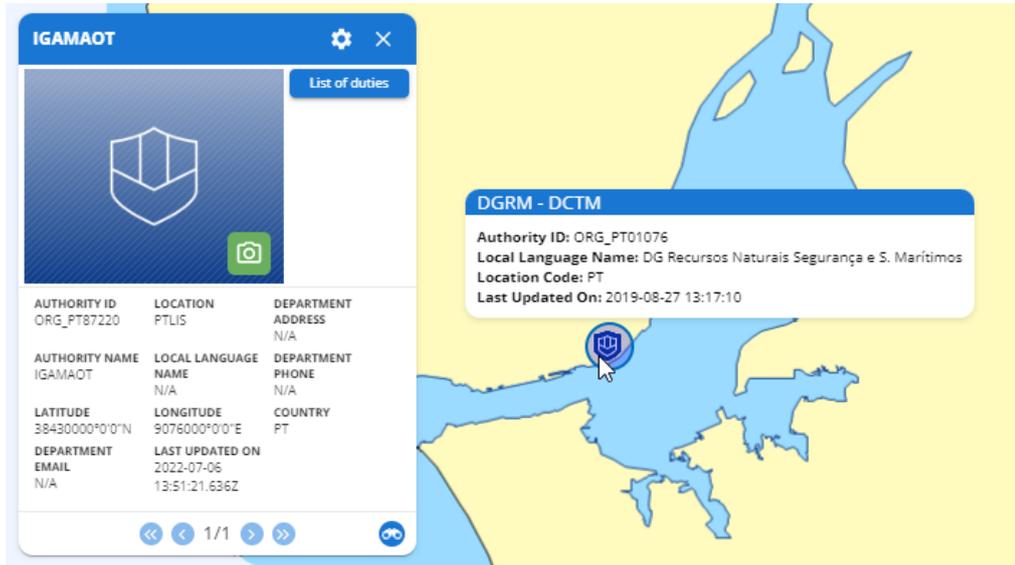


10. Ports and Offshore installations

The SEG is Integrated with the Central Locations Database (CLD) to display ports and offshore installations. The Central Location Database (CLD) is used as a reference for locations by all maritime applications of the SSN ecosystem as well as national systems of the Member States (SSN and NSW).

The CLD contains LOCOCODES listed in the UN/LOCODE list, SSN specific locations and port facilities stemming from the IMO Maritime Security module of the Global Integrated Shipping Information System (GISIS). The SEG currently only displays LOCOCODEs corresponding to ports and offshore installations.

The Ports and offshore installations layer may be displayed on the map with this symbol . By selecting a Port, the window shows summarised information for the port selected. It is possible to List Vessels in Port, List Expected Arrivals and List Recent Departures. When available, for some Ports, it is possible to List Port Facilities.

Figure 37 Ports and Offshore installations window and TTT table with list of Port facilities

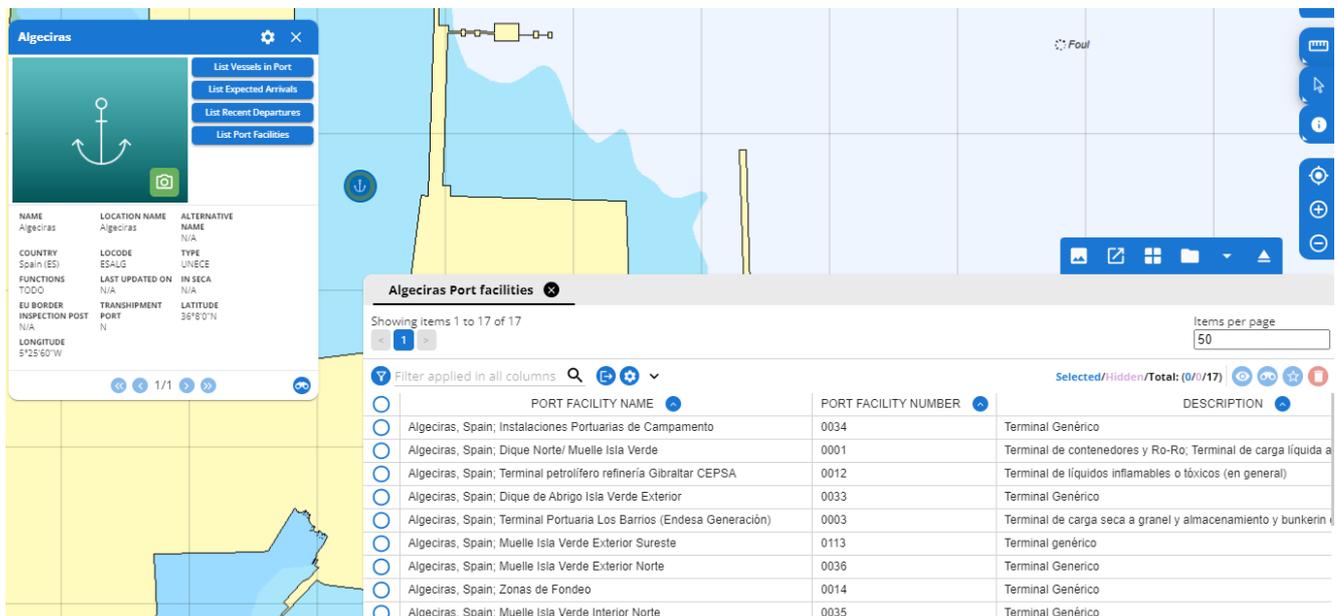


11. Search

Two types of Search functions are available, the “Smart search” function and “Advanced search” function.

11.1 Smart search

Smart Search enables the user to quickly find and filter across different object categories (e.g. Vessels, Ports, Places, EO images, Oil spills, Place marks etc.). To search object only in certain categories, it is necessary to press the following button . No wildcards are necessary. The search must contain at least 3 characters (letters, numbers or symbols) of the identifier being searched. The Smart Search returns the number of hits in each category based on combination of the letters and or numbers used. Selecting a category expands the list.

Figure 38 Smart Search

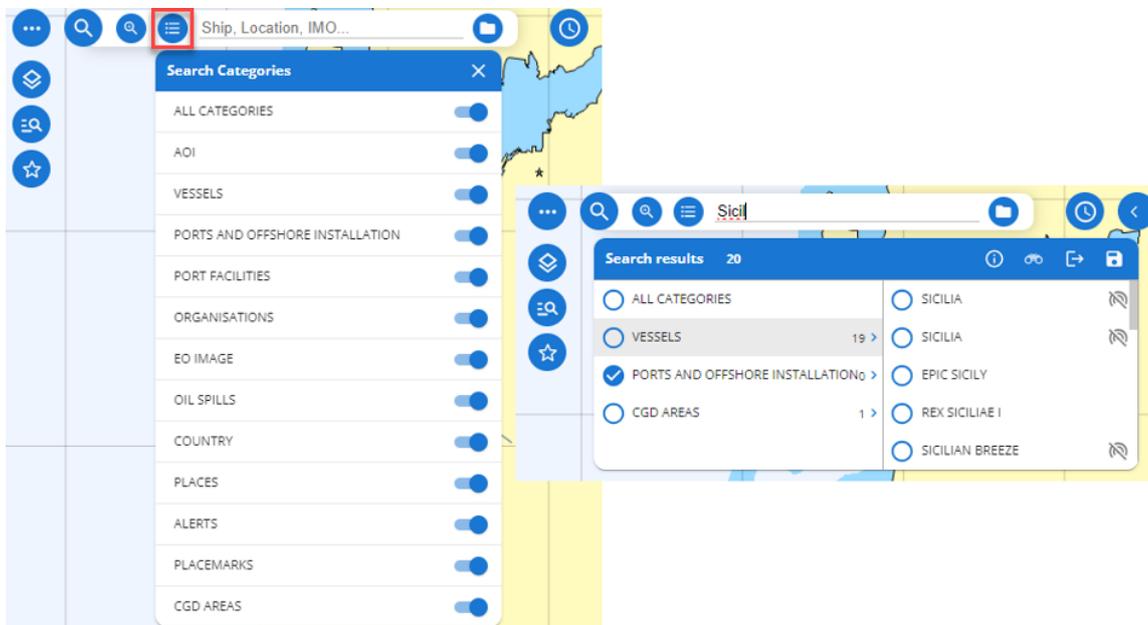

The Search function will search for: **Vessels** (IMO, MMSI, IR, Name or Call Sign) which have reported a position regardless of the positioning system. If the searched vessel that has not transmitted their position in the last 24hours

this sign appears next to the name .

EO data may be searched **within a time window -3 / +3 days**. The Advanced Search function must be used to search for EO data and products outside this time window.


Search results objects are marked in green .

An option to save the search results is also available by clicking on .

By clicking on  it's possible to access the 'Search history' where the Recent Smart Search and the Saved Search are shown. A maximum of 100 search results may be saved.

Results can be exported by clicking on . If no category is selected, then the smart search result will be “No Results”.


Figure 39 No results found.

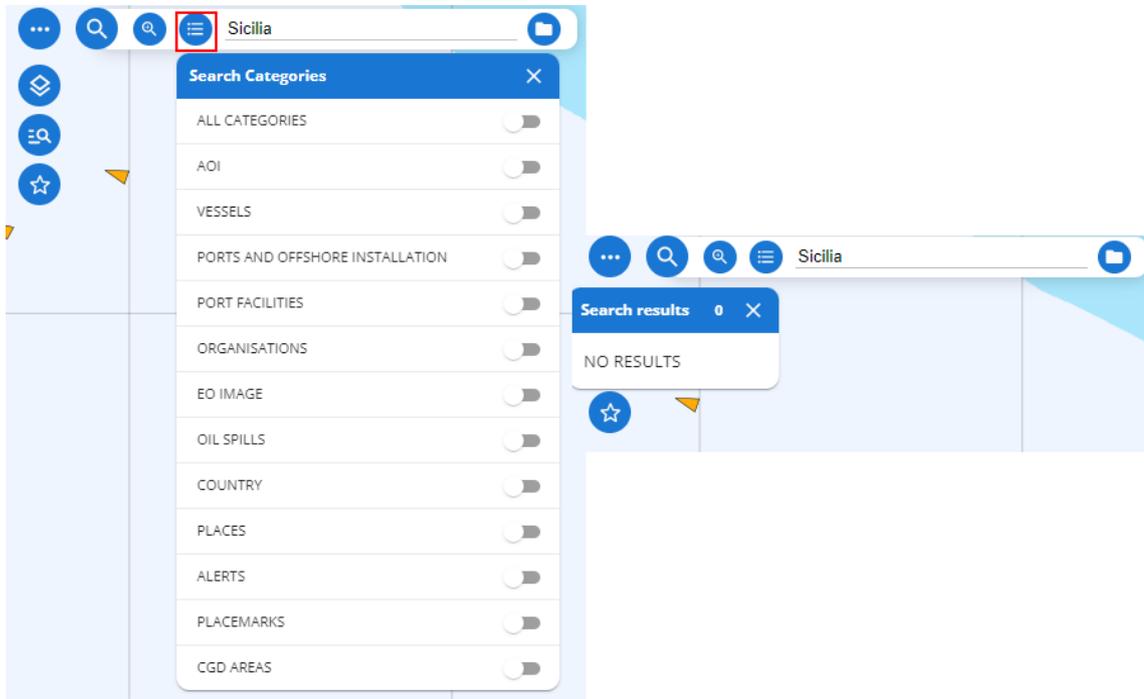

11.2 Advanced search

The advanced search allows the user to search for a specific object Vessels, EO data, Oil spills and ABM Alerts with specific parameters.

Figure 40 Advanced Search

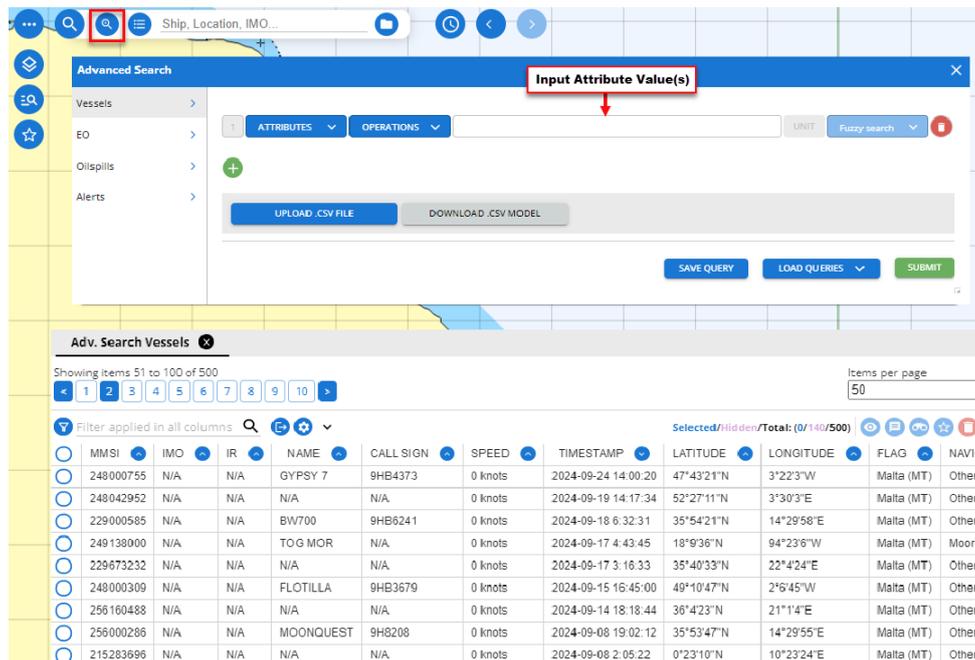


As indicated in the previous figure, advanced search is performed by selecting: an attribute, an operation and the input attribute value(s).

A specific set of operations are provided depending on the selected attribute. The table below lists all available operations.

Operation	Description
In	Finds records where the attribute matches any value from the list of specified values (comma separated)
Not in	Finds records where the attribute does not match any value from the list of specified values (comma separated)
Between	Finds records where the attribute value is within a specified range (not inclusive)
Contains	Finds records where the attribute contains the specified substring
Begins with	Finds records where the attribute starts with the specified substring
Ends with	Finds records where the attribute ends with the specified substring
Has a value	Finds records where the attribute is not null and not empty
Is null or empty	Finds records where the attribute is null or has no value (empty)
=	Finds records where the attribute exactly matches the specified value
!=	Finds records where the attribute does not match the specified value
>	Finds records where the attribute is greater than the specified value
>=	Finds records where the attribute is greater than or equal to the specified value
<	Finds records where the attribute is less than the specified value
<=	Finds records where the attribute is less than or equal to the specified value

A tooltip is provided for each attribute. When it is relevant, the tooltip will give instructions for the input values.

Figure 41 Advanced Search Attributes Tooltip

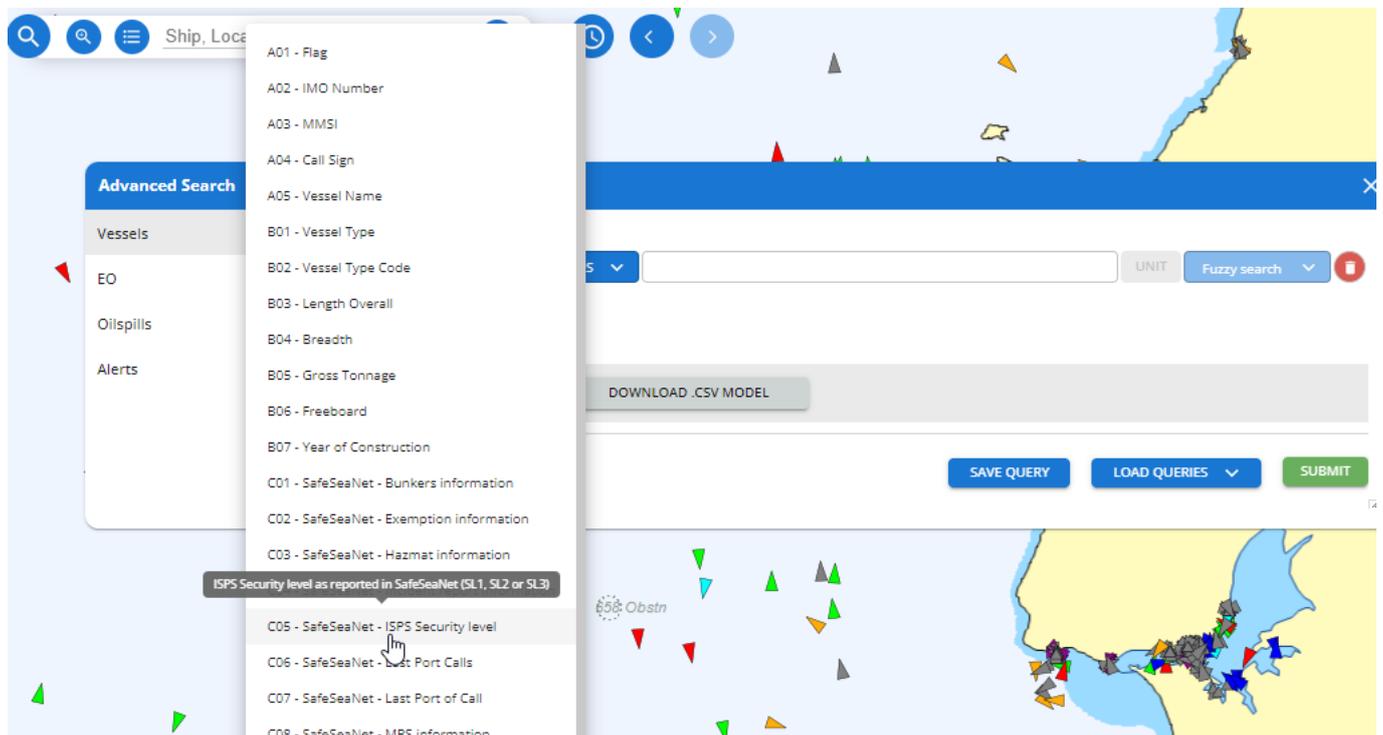

The results are displayed in the TTT tabular view.

The user can add additional conditions for the advanced search by clicking on the icon. When 2 or more conditions are defined, the user can pick “AND” / “OR” logic by clicking on the combination logic icon: . The previous search criteria can be combined differently by selecting “MIXED” combination logic and typing the desired combination rules.

To locate a specific vessel on the map, select the vessel from the Advanced Search Vessels in the TTT panel tabular view.

The search results will be marked in green .

Figure 42 Advanced Search identified vessel



The screenshot displays the advanced search interface. On the left, a sidebar shows details for the vessel 'TOG MOR' (IMO: 249138000). The main area features a map with a green plus icon marking a vessel. Below the map is a table of search results.

MMSI	IMO	IR	NAME	CALL SIGN	SPEED	TIMESTAMP	LATITUDE	LONGITUDE	FLAG	NAVIG
248000755	N/A	N/A	GYPSY 7	9HB4373	0 knots	2024-09-24 14:00:20	47°43'21"N	3°22'3"W	Malta (MT)	Other
248042952	N/A	N/A	N/A	N/A	0 knots	2024-09-19 14:17:34	52°27'11"N	3°30'3"E	Malta (MT)	Other
229000585	N/A	N/A	BW700	9HB6241	0 knots	2024-09-18 6:32:31	35°54'21"N	14°29'58"E	Malta (MT)	Other
<input checked="" type="checkbox"/>	249138000	N/A	TOG MOR	N/A	0 knots	2024-09-17 4:43:45	18°9'36"N	94°23'6"W	Malta (MT)	Moore
229673232	N/A	N/A	N/A	N/A	0 knots	2024-09-17 3:16:33	35°40'33"N	22°4'24"E	Malta (MT)	Other
248000309	N/A	N/A	FLOTILLA	9HB3679	0 knots	2024-09-15 16:45:00	49°10'47"N	2°6'45"W	Malta (MT)	Other
256160488	N/A	N/A	N/A	N/A	0 knots	2024-09-14 18:18:44	36°4'23"N	21°1'14"E	Malta (MT)	Other
256000286	N/A	N/A	MOONQUEST	9H8208	0 knots	2024-09-08 19:02:12	35°53'47"N	14°29'55"E	Malta (MT)	Other
215283696	N/A	N/A	N/A	N/A	0 knots	2024-09-08 2:05:22	0°23'10"N	10°23'24"E	Malta (MT)	Other

For a more advanced explanation on the advanced search refer to the EMSA videos on [EMSA website](#) or YouTube.

12. Query


The Query menu allows a user to make a query on the map of five types:

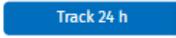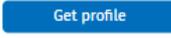- Area
- Get Track (also available via the Command & Info panel   as Advanced Get track)
- Get profile (also available via the Command & Info panel   as ISP Report)

Depending on the users' permission settings and access rights, options for LRIT and SAR SURPIC may also be available.

- SAR SURPIC
- LRIT

Figure 43 Query options

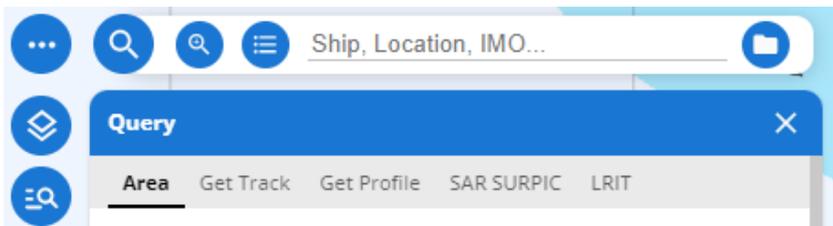

12.1 Area Centric Query (ACQ)

An area on the map may be searched within a defined time range. Depending on the user permissions an area can be searched for vessel tracks, first/last positions of vessels, ABM alerts, EO Images and EO Products (possible oil spills, VDS).


12.2 Drawing, Importing and Editing an Area

To define the area, the user can draw on the map using the draw tools 

and then select query . Alternatively, the user can select the query button and then use the draw tools.

After drawing an area, the AOI Editor becomes available by double clicking on area frame.

Figure 44 AOI Editor

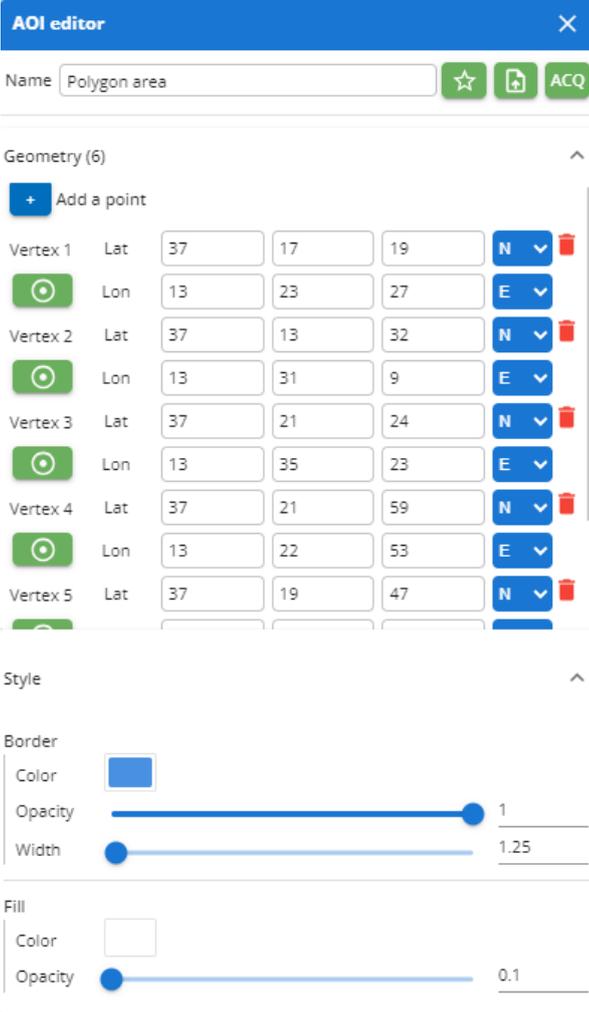

AOI editor [X]

Name: Polygon area [☆] [📄] [ACQ]

Geometry (6)

+ Add a point

Vertex 1	Lat	37	17	19	N	🗑️
	Lon	13	23	27	E	
Vertex 2	Lat	37	13	32	N	🗑️
	Lon	13	31	9	E	
Vertex 3	Lat	37	21	24	N	🗑️
	Lon	13	35	23	E	
Vertex 4	Lat	37	21	59	N	🗑️
	Lon	13	22	53	E	
Vertex 5	Lat	37	19	47	N	🗑️

Style

Border

Color: [Blue swatch]

Opacity: [Slider from 0 to 1, set at 1]

Width: [Slider from 0 to 1.25, set at 1.25]

Fill

Color: [White swatch]

Opacity: [Slider from 0 to 1, set at 0.1]

The AOI Editor allows the user to rename the area, to edit the coordinates, to change the area border colour, width and opacity and the area fill colour and opacity. The AOI Editor also allows the export of the area as a compressed (zip) shape file. The AOI editor provides the option to open the query window to make an ACQ and to associate the area with an ABM.

Through the Apps button , it is possible to import an area into the SEG . The import file must be a **compressed (zip) shape file**.


To delete an area, it is necessary to first select it by clicking on the frame (the area's frames will turn yellow) and delete all the areas by clicking on the trash bin icon and selecting the session AOIS trash bin.

12.3 Area Centric Query for Vessels

After defining the area, the user selects the time range for the query and then clicks on submit. To avoid a user creating a very large data query, limitations in terms of size of the area and number of vessels that can be retrieved have been pre-defined.

The user will not be able to submit the query if the area defined is too large or if the number of data elements is more than 10,000. Vessel tracks can be searched up to 2 years in the past. However, the maximum time range for a vessel track for an **area centric query is limited to 24 hours**.

Figure 45 Area centric query for vessels

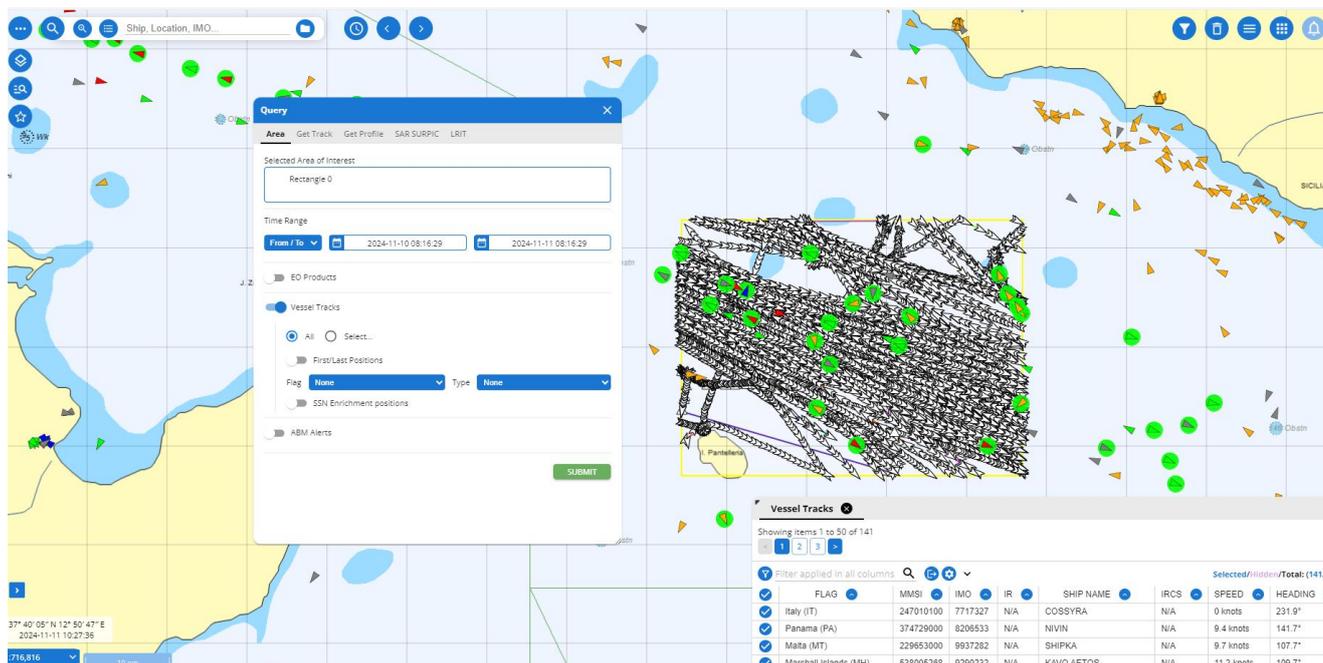

The results of the area centric query are available to view in the Table and in the Timeline. The Figure below shows the results of the vessel area centric query in a Table. Click on the interested vessel and then select , position reports for the selected vessel open in a new tab.

12.4 Area Centric Query for EO images and products

It is possible to make an Area Centric Query for EO products including Oil spill and Vessel Detection Services, EO image frames/footprints for an unlimited time. However, only Earth Observation images which have been acquired within the last 18 months will be visible on the map. EO images acquired earlier than 18 months will have an 'Archive' status and will not be shown. EMSA will restore the archived image on the SEG if requested.

12.5 Get Track of a vessel

The Get Track of a vessel is based upon the integrated ship positions from all the tracking systems the user is authorised to view,

The "Track 24h"  in the Command & Info panel shows the track of the vessel for the last 24 hours.

To search for tracks beyond 24 hours the user should use the Advanced Get Track available through the Command & Info panel (through the button ) or the Query functionality. Historical vessel track data is available for the last 2 years.


In the query window, to display the track of a vessel, the user selects a vessel and defines the time range. By default, under Options -> Position sources, all sources are enabled.

By enabling the First/Last Positions the track will retrieve the first position and/or the last position reported. If disabled, the track will display all positions reported within the time range defined. Click on Submit to retrieve the tracks.

Under the entry "Options" it is also possible to enable or disable the following options:


- SSN Enrichment Positions
- IN/OUT SECA area approximate distance calculation
- IN/OUT SECA area approximate speed calculation

Figure 46 Advanced Get track

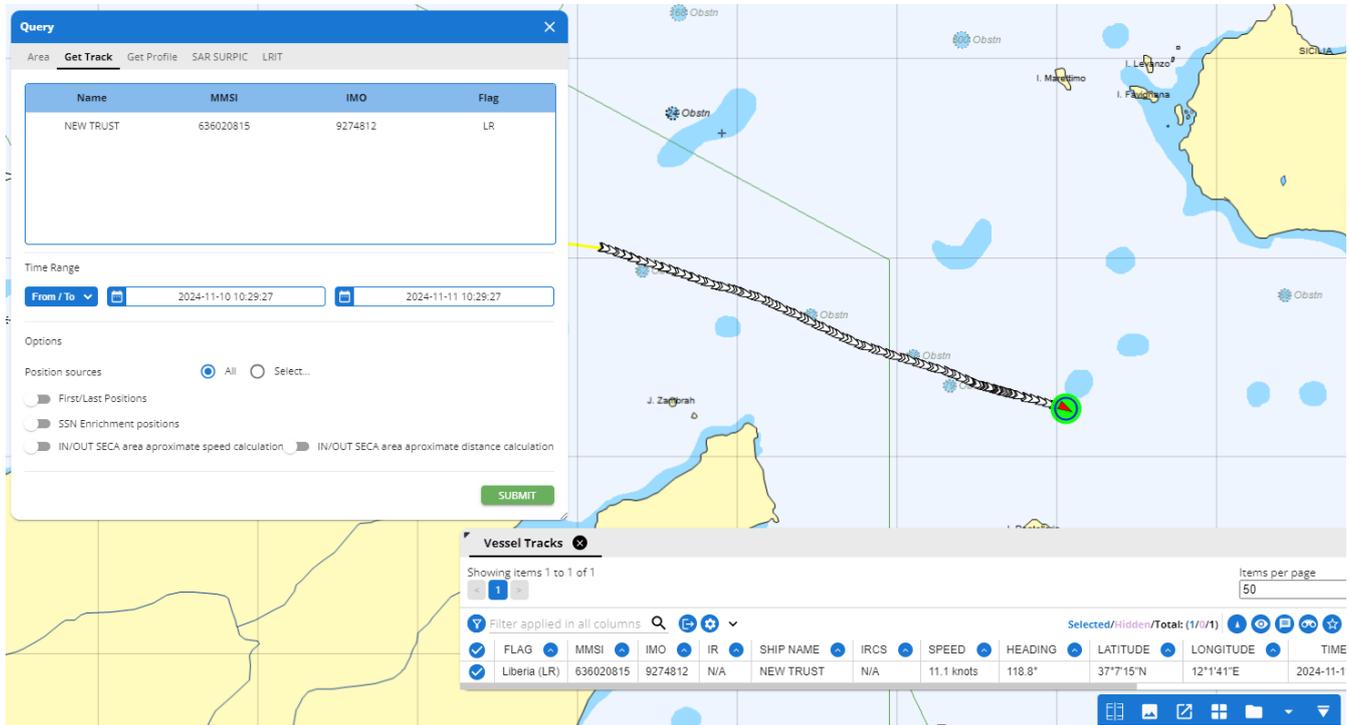


In the TTT panel the track is also displayed in a timeline  with a playback mode associated. To animate the vessel track, click on . Also, in the TTT panel in the tabular view the list of positions of the vessel appears. The positions in the timeline are indicated by a brown circle. Every brown circle has a yellow circle on its side and the number inside indicate the number of the positions which have been registered for that period. Zooming in the time will be expanded and the number inside the yellow circle will decrease. By selecting a specific position, the corresponding position on the map is highlighted.

Figure 47 Timeline

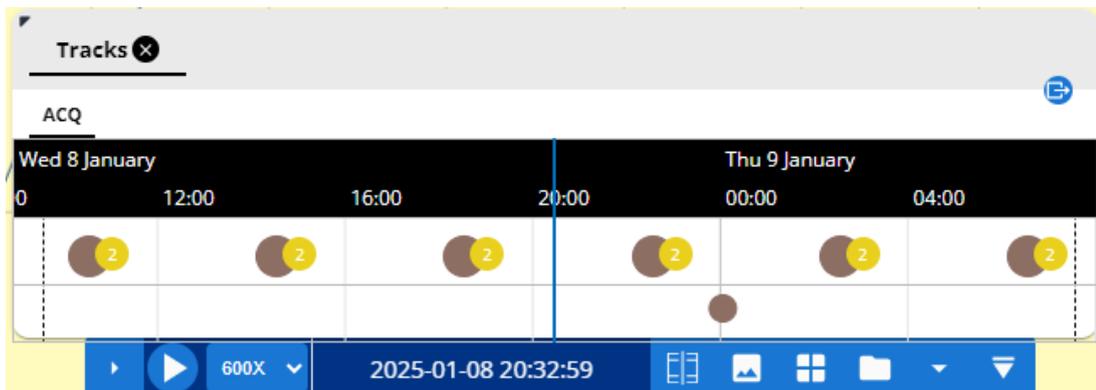

The speed profile of the vessel for the selected period is also available by clicking on the "Speed Profile" icon. Speed profile is available for most of the vessels.

Figure 48 Speed Profile

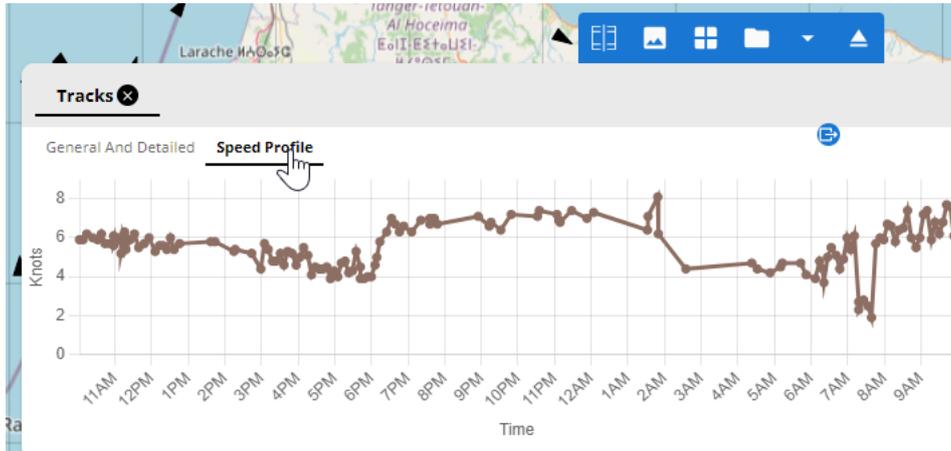

12.6 Advanced Replay Function


The system allows users to replay vessel movements on the map over a user-defined time period, enabling detailed analysis of historical vessel behaviour.

The user is expected to follow the steps below to activate the Advanced Replay function:

1. Select vessels of interest
2. Go to Query Panel
3. Select tab Get Track and pick time range to track
4. Submit a Query

The timeline can be displayed by clicking on the replay icon .

It will open the control panel.

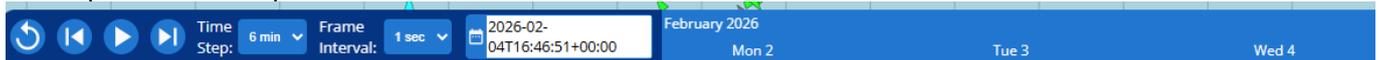

The timeline panel shows control parameters, including  (time step), which controls the replay speed, and  (frame interval), which controls the update frequency. Users can zoom in and out on the timeline to get different level of details of the replayed time.

The tail on the right of the panel shows the vessel's recent path behind its current position, over the time interval between the red line and the red dotted line. This tail can be expanded once the reply is running.



To start the Replay function user should click on the button . It is also possible to label the replayed vessels' tracks by activating the 'Client Preferences'/'Labels' options.

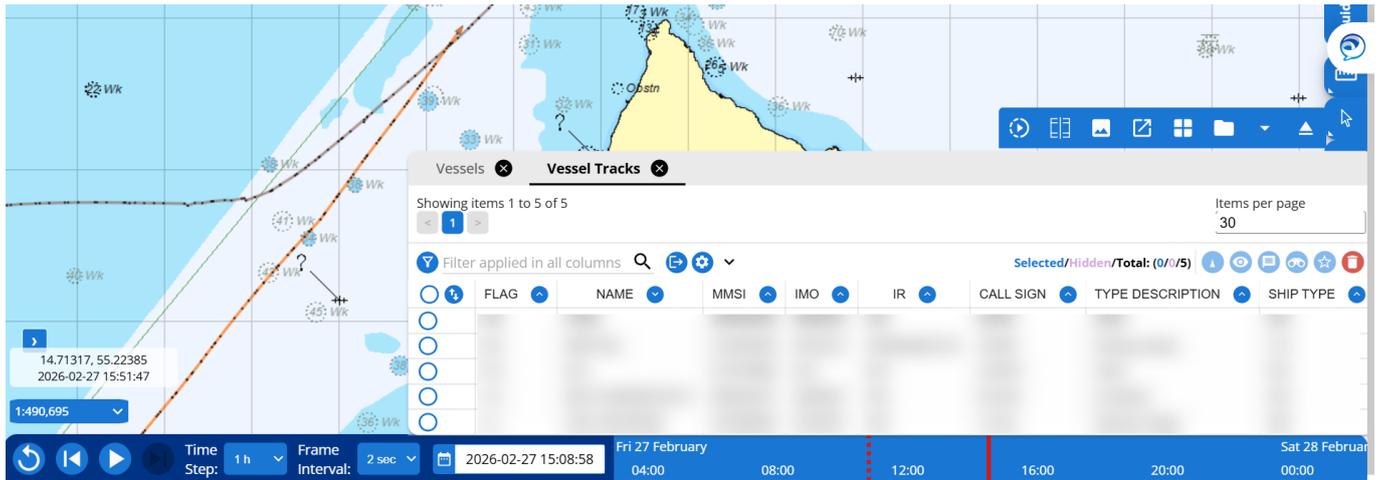


Figure 49 Replay function controls

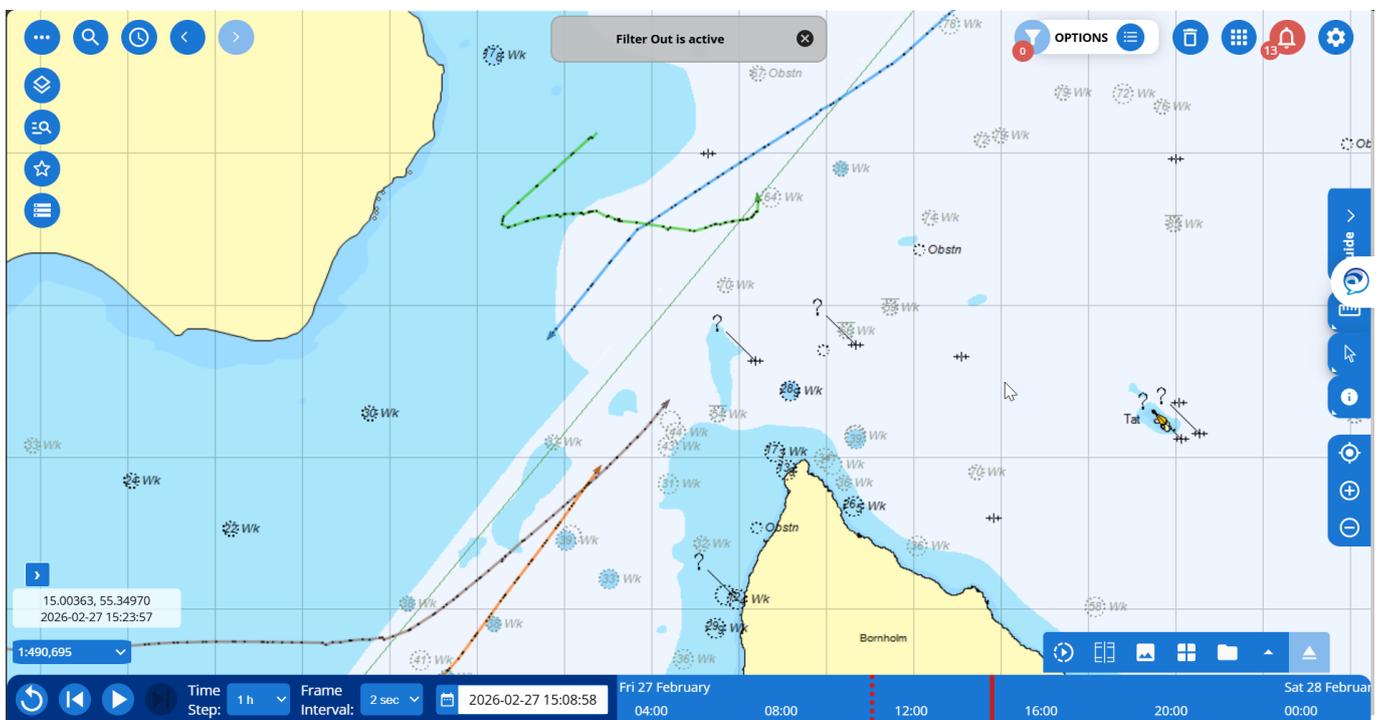


Figure 50 Replay function with multiply tracked vessels


12.7 Get profile of a vessel

The Get profile provides aggregated information for the vessel selected including the tracks for up to the last 12 months and all events related to the vessel for the time specified by the user.

The Get profile Get profile in the Command & Info panel retrieves the last 24 hours aggregated information. To search beyond 24 hours the user should use the Integrated Ship Profile (ISP) report Get profile ... available through the Command & Info panel or the Query functionality (Get profile Get profile).

To display the track of a vessel, the user selects a vessel and defines the time range. By default, under Options ->Vessel Tracks all sources are enabled.

Figure 51 Get Profile

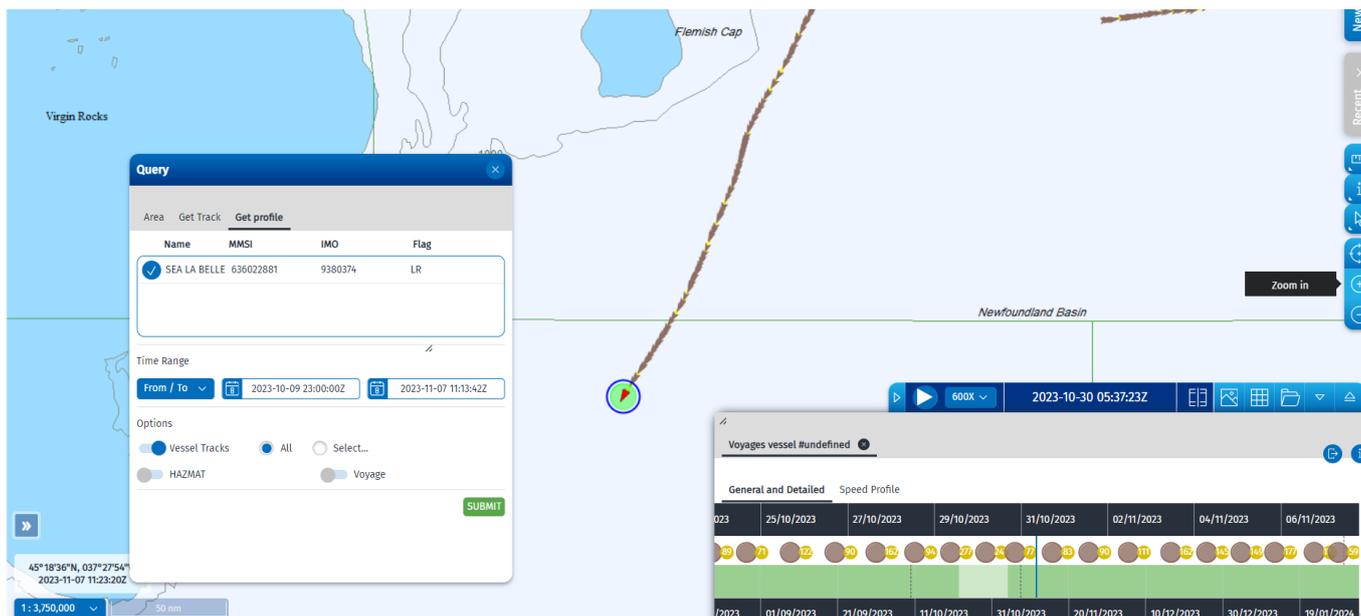

In the TTT panel the track reports and the enrichment, if available, is also displayed in a timeline  with a playback mode associated. To animate the vessel track, click on . Also, in the TTT panel in the tabular view the list of positions of the vessel appears. By selecting a specific position, the corresponding position on the map is highlighted.

12.8 LRIT

Request Form: Request LRIT and display LRIT position reports. The vessel must have an IMO number. This query option is available only if the user has adequate permissions.

12.9 SAR SURPIC

For Search and Rescue purposes, searches for the most recent position/ identification of ships within a defined area (from all position sources within the last 24 hours). This query option is available only if the user has adequate permissions.

The user should do the following steps:

1. Position the map in the desired area;
2. Go to the Query Panel;
3. Select tab SAR SURPIC (search and rescue surface picture) and fill all fields.

By default, a square 10x10 area is draw in the centre of the map. Note that for the LRIT position reports a maximum of 4 positions can be made available in the last 24 hours.


13. Favourites

Favourites can be one or more elements on the map that can be marked by users and associated to Favourites Groups. Three types of groups are possible:

- TOI Vessels
- AOI: Areas

To add a group of vessels in the favourites, it is necessary to select all the vessels of interest and click the Favourite button on the left of the screen. In the new window, under the entry “group”, the user must select “new group” and to put the name for that group of vessels. It is also possible to select a colour for each group. After that, the user can create the new group by clicking on the green button  .


Figure 50 Add vessels to Favourite

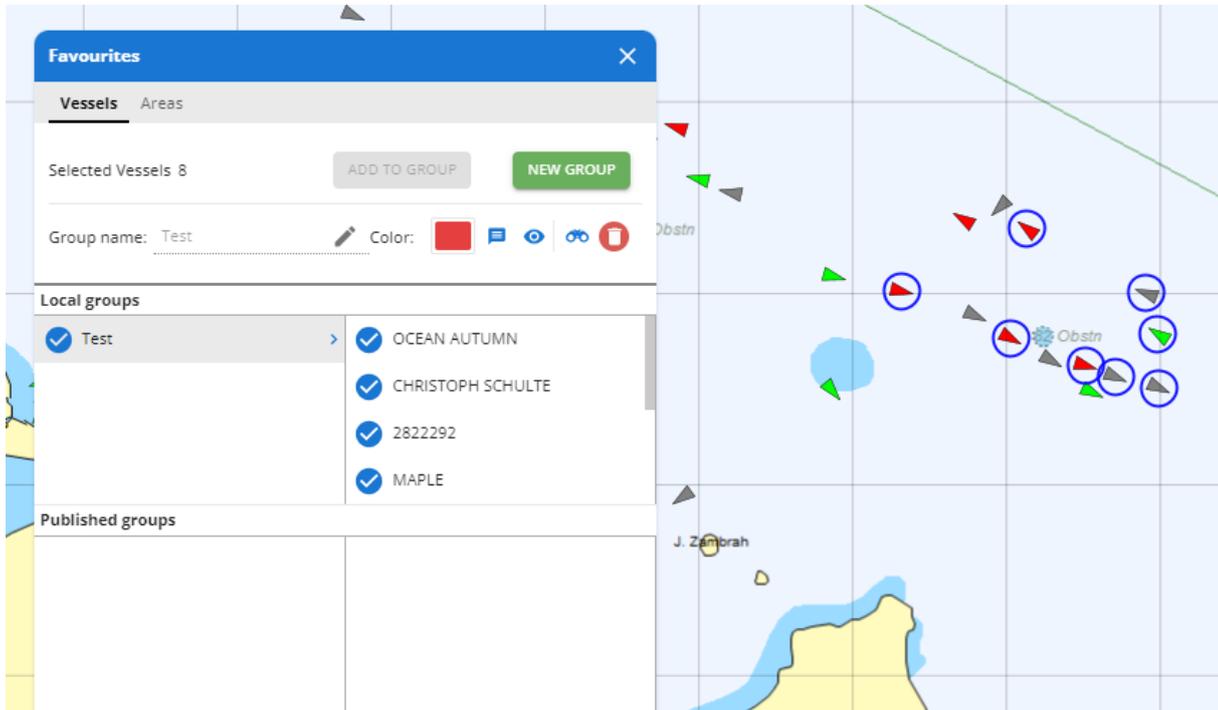

The user may want to add other vessels in a group after the group has been already created. In this case, it is necessary to select the vessel(s) to add and to select the correspondent's name of the group in the entry. The operation will be completed by selecting the green button “Add”.


The same procedures can be applied to add areas in a group.

Figure 51 Add vessels in a group

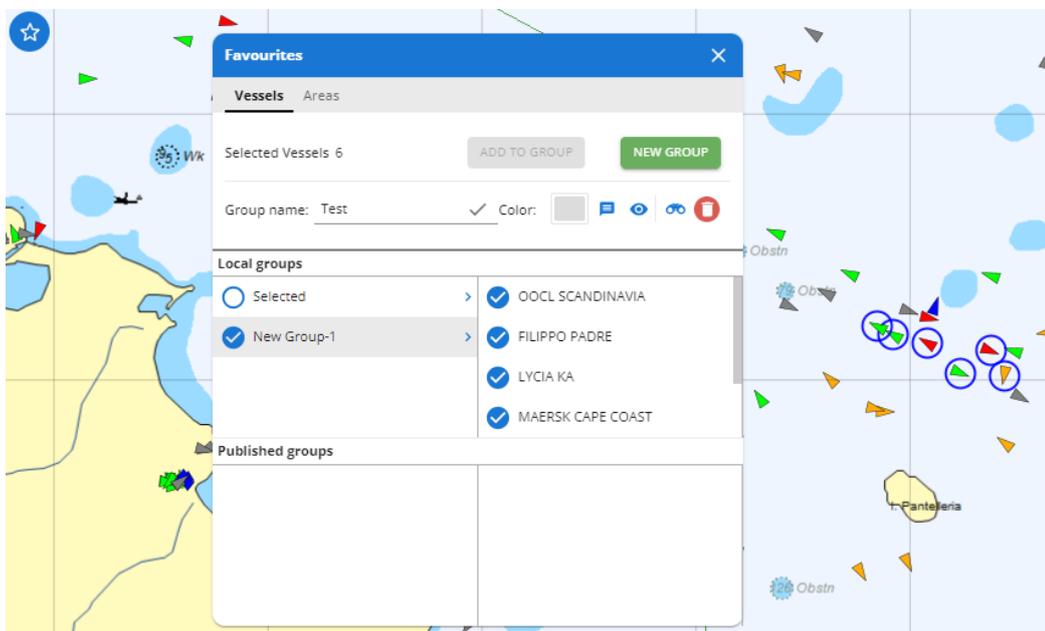

The saved favourites groups are shown in the section “Saved” of the Favourites window. By selecting one of the group the user is able to see all the selected vessels on the map.

Figure 54 Show saved groups

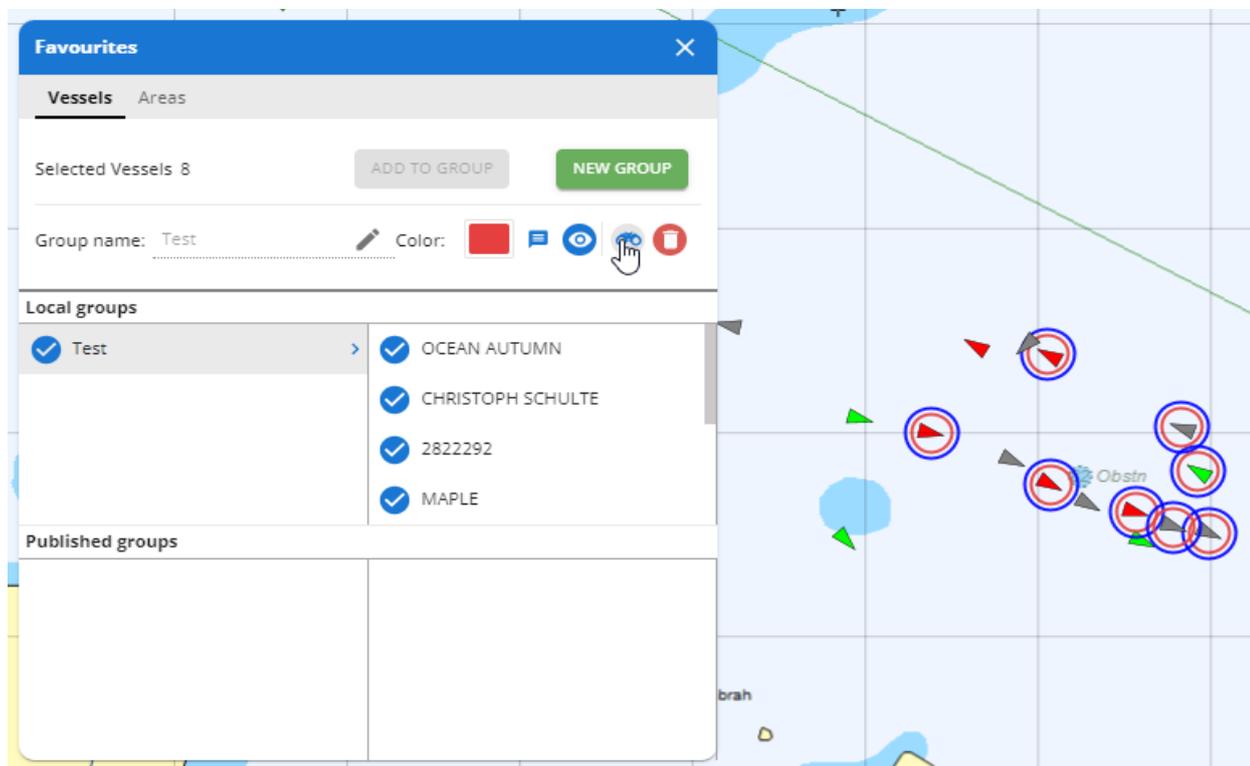

14. TTT panel (Tables, Timeline and Thumbnails)

On the bottom right of the map window the Tables, Thumbnails and Timeline (TTT) panel is available.

14.1 Tables

A Tabular View of information is available from the TTT panel. In the Table, a user can sort (ascend/descend) and configure the columns in which the search is made. By clicking on a table row, the map zooms to the location of the selected item. It is possible to Export the information from the Table to CSV, XLS, PDF+, PDF, GML, SHP, KML or GPX format.

TTT table can be undocked by clicking on the  icon. User can then move the table around the screen in a preferred position.

The  icon, allows users to export the TTT table in a new browser tab. When closing the tab, TTT table automatically returns to the SEG User Interface.

14.2 Timeline

Information can also be viewed along a timeline. A playback module is available. All the positions are displayed dynamically in the map.

It is possible to zoom in and out on the Timeline by using the mouse wheel or the swipe gesture in mobile devices.

When in playing mode, when the timeline passes a time where a position was reported, that position is marked on the map with a circle. The speed of the playback mode can be adjusted. It is also possible to click on the map using the mouse and drag the timeline.

14.3 Thumbnails

The thumbnail view presents a miniature version of each EO image (High Resolution Optical and Synthetic Aperture Radar) that the user has permission to view. Each thumbnail displays the EO image date and time of acquisition and Service ID. Clicking on the thumbnail image will zoom to its location on the map. It will appear the EO Acquisitions available delivered in the last 3 days at the latest.

Figure 55 Thumbnails



European Maritime Safety Agency

Praça Europa 4
1249-206 Lisbon, Portugal
Tel +351 21 1209 200
Fax +351 21 1209 210
emsa.europa.eu

